

**SAMSUNG**

# ULTIMATE POWER MINI- COMPACT SYSTEM


**VCD/MP3-CD/CD-R/RW PLAYBACK**

MAX-VS940

MAX-VS950

MAX-VS990

## Instruction Manual

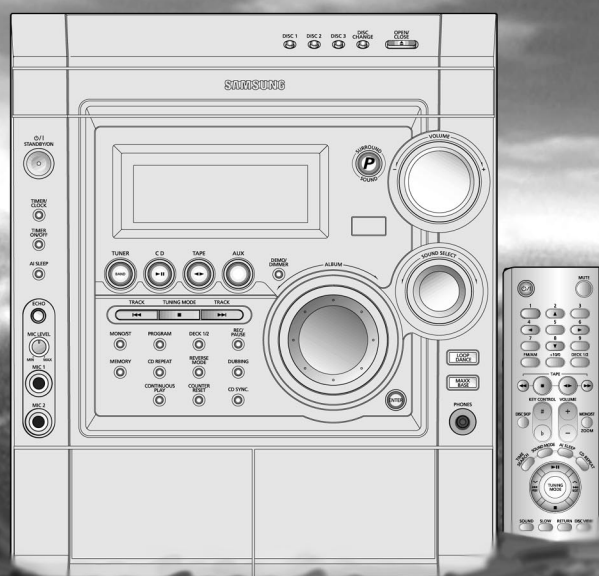

## Safety Warnings

GB

CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUKT  
LUOKAN 1 LASER LAITE  
KLASS 1 LASER APPARAT  
PRODUCTO LASER CLASE 1

### CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



**CAUTION**  
RISK OF ELECTRIC SHOCK.  
DO NOT OPEN



**CAUTION:**  
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**CAUTION-INVISIBLE LASER RADIATION WHEN OPEN  
AND INTERLOCKS DEFEATED, AVOID  
EXPOSURE TO BEAM.**



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

# Contents

Thank you for buying this  
SAMSUNG mini-compact system.  
Please take time to read these instructions.  
They will allow you to operate your  
system with ease and take full advantage  
of its features.



◆ SAFETY WARNINGS .....	2
◆ INSTALLING YOUR MINI-COMPACT SYSTEM .....	
■ Front Panel View .....	4
■ Remote Control .....	5
■ Rear Panel View .....	6
■ Where to Install Your Mini-Compact System .....	6
■ Connecting your System to the Power Supply .....	6
■ Inserting Remote Control Batteries .....	7
■ Connecting the Loudspeakers .....	7
■ Connecting to an External Source .....	8
■ Connecting to the Equipment .....	8
■ CD Digital Out Jack(option) .....	8
■ Connecting the AM (MW/LW) Aerial .....	9
■ Connecting the FM Aerial .....	9
■ Connecting the SW Aerial (OPTION) .....	9
■ DEMO/DIMMER function .....	10
■ ECO Mode Function .....	10
■ Setting the Clock .....	10
◆ VCD/MP3-CD/CD-PLAYER .....	
■ Loading and Changing Compact Discs .....	11
■ To replay the CD/MP3-CD .....	11
■ Selecting a CD in the Disc changer .....	12
■ MP3-CD Playback .....	12
■ Selecting a Track .....	12
■ Searching for a Specific Music Passage on a CD .....	13
■ Function to skip through 10 tracks at a time .....	13
■ Continuous Play .....	13
■ Repeating One or All Tracks on the Compact Discs .....	13
■ Last Memory Function .....	13
■ Programming the Order of Playback .....	14
■ Checking or Changing Programmed Tracks .....	14
■ Video CD Player Playback .....	15
■ Search Functions .....	15
■ Time Search Function .....	15
■ When adjusting play speed .....	16
■ NTSC/PAL Selection Method .....	16
■ Sound Selection Function .....	16
■ KEY CONTROL Function .....	16
■ VCD VIEW function .....	17
■ ZOOM Function .....	17
◆ TUNER .....	
■ Searching for and Storing the Radio Stations .....	18
■ Selecting a Stored Station .....	19
■ Improving Radio Reception .....	19
◆ TAPE DECK .....	
■ Listening to a Cassette .....	20
■ CD Synchro Record Feature .....	20
■ Recording a Compact Disc .....	20
■ Copying a Cassette (Dubbing) .....	21
■ Selecting the Cassette Playback Mode .....	21
■ Tape Counter .....	21
◆ OTHER FUNCTIONS .....	
■ Timer Function .....	22
■ Cancelling the Timer .....	22
■ Mute Function .....	23
■ Selecting Latin Sound .....	23
■ Sub woofer Level Control(MAX-VS940/VS990) .....	23
■ Power Surround/Power Sound Function .....	23
■ Setting the System to Switch off Automatically .....	24
■ MAXX BASS Level Function(MAX-VS940/VS990) .....	24
■ S.BASS Level Function(MAX-VS950) .....	24
■ Microphone Function .....	24
■ Connecting Headphones .....	24
◆ RECOMMENDATIONS FOR USE .....	
■ Safety Precautions .....	25
■ Cleaning Your Mini-Compact System .....	25
■ Precautions When Using Compact Discs .....	26
■ Precautions When Using Audio Cassettes .....	26
■ Before Contacting the After-Sales Service .....	26
■ Technical Specifications .....	27

## Symbols



Press



Push




Important



Note


## Front Panel View

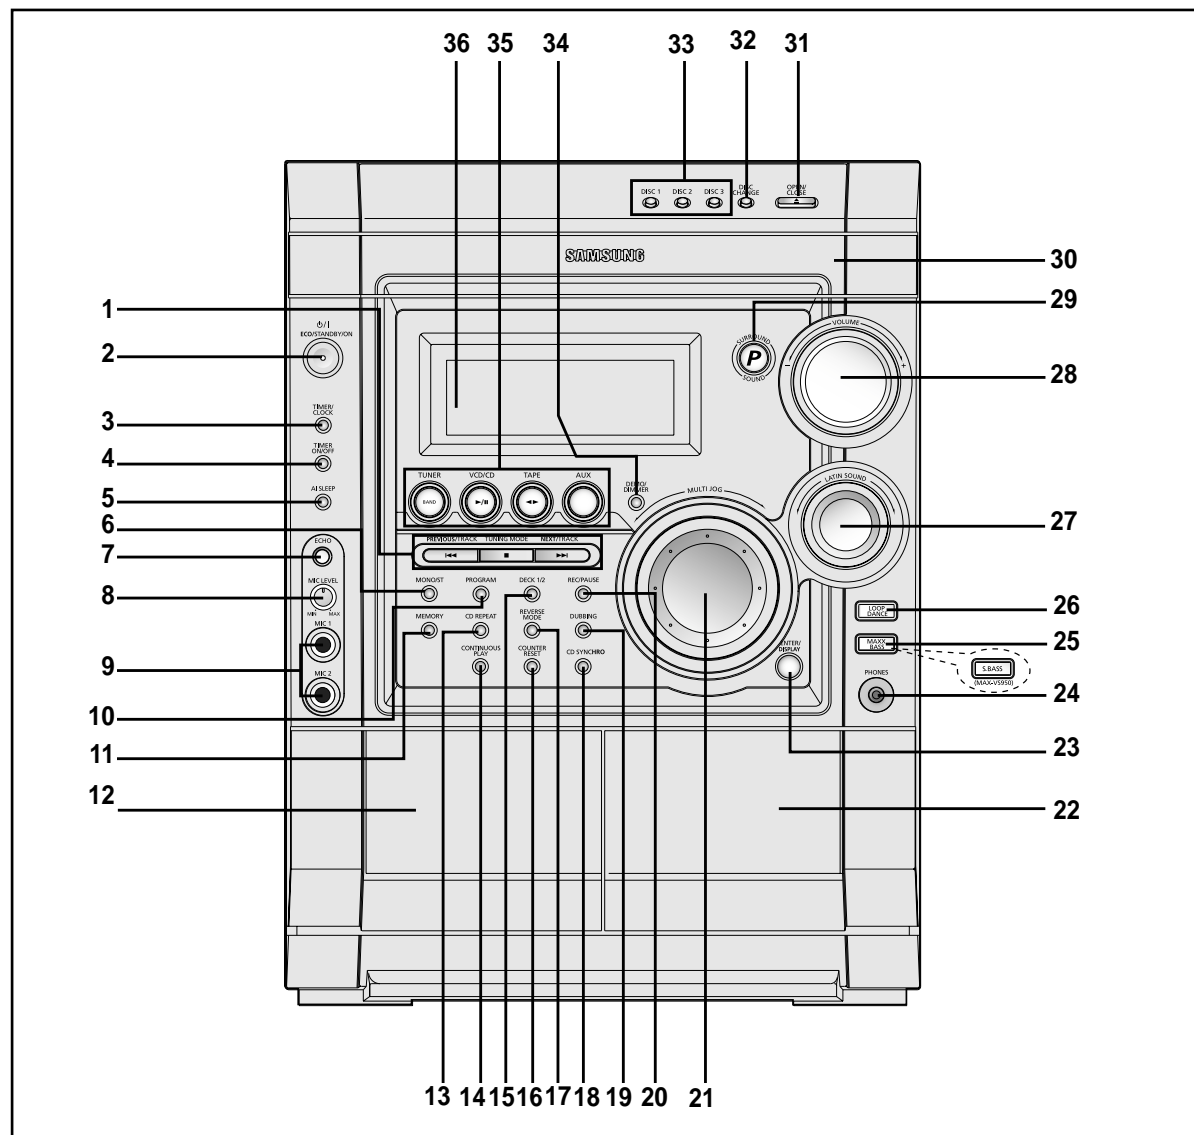

1. Search Function buttons  
Tuning Mode or Stop button
2. ECO/STANDBY/ON
3. Timer/Clock
4. Timer On/Off
5. AI Sleep
6. FM Mono/Stereo
7. Echo
8. MIC Level
9. MIC1, MIC2
10. Program
11. Memory
12. Cassette Deck 1
13. CD Repeat
14. CD Continuous play
15. Deck 1/2
16. Tape Counter Reset
17. Tape Reverse Mode
18. CD Synchro Recording

19. Tape Normal Speed Dubbing
20. Record/Pause (PAL/NTSC)
21. Multi Jog
22. Cassette Deck 2
23. Enter/Display
24. Headphone Jack Connector
25. MAXX Bass(MAX-VS940/VS990)  
Super Bass(MAX-VS950)
26. Loop Dance
27. Latin Sound
28. Volume
29. Power Surround/Power Sound
30. Compact Disc Compartment
31. Open/Close
32. Disc Change
33. Disc Selection buttons
34. Demo/Dimmer
35. Function Selection buttons
36. Window Display




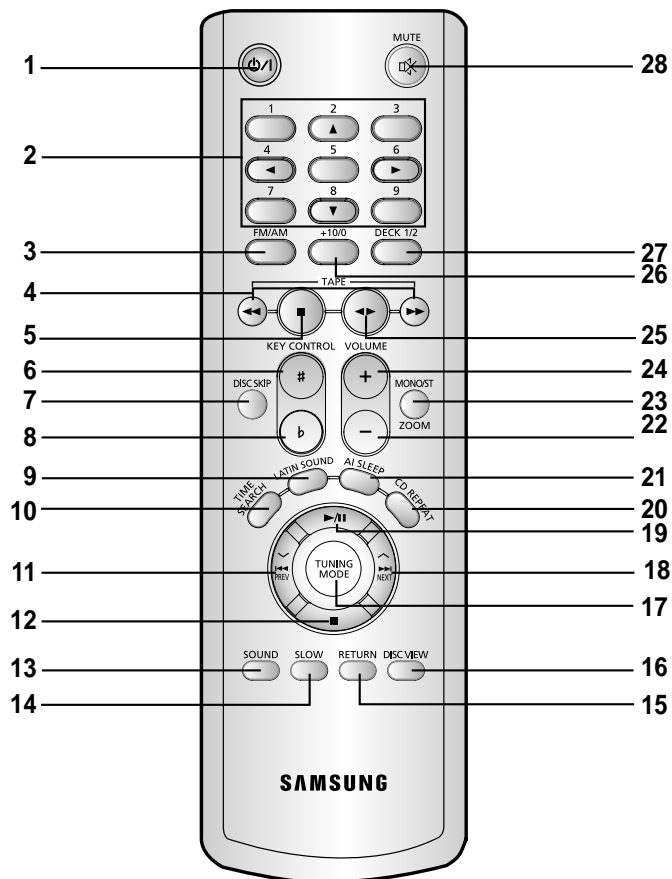

- |                                    |                             |
|------------------------------------|-----------------------------|
| 1. ECO/STANDBY/ON                  | 17. Tuning Mode             |
| 2. Digit Buttons/Direction Buttons | 18. Track Next              |
| 3. FM /AM                          | 19. Disc Play/Pause         |
| 4. TAPE Rewind/TAPE Fast-Forward   | 20. CD Repeat               |
| 5. Tape Stop                       | 21. AI Sleep                |
| 6. Key Control #                   | 22. Volume Decrease         |
| 7. Disc Number Skip                | 23. FM Mono/Stereo/VCD zoom |
| 8. Key Control b                   | 24. Volume Increase         |
| 9. Latin Sound                     | 25. TAPE Play               |
| 10. Time Search (Last Memory)      | 26. +10/0                   |
| 11. Track Previous                 | 27. Deck 1/2                |
| 12. CD Stop                        | 28. Mute                    |
| 13. Sound                          |                             |
| 14. VCD Slow Play                  |                             |
| 15. Return                         |                             |
| 16. Disc View                      |                             |

## Rear Panel View

GB

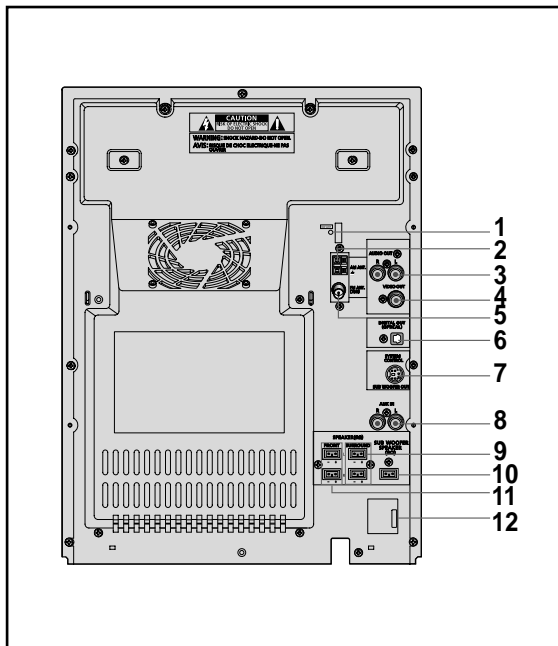


1. SW Aerial Connector Terminal (OPTION)
2. AM Aerial Connector Terminals
3. AUDIO(DISC) Output Connectors
4. VIDEO(DISC) Output Connectors
5. FM Aerial Connector Terminal
6. Digital Out (option)
7. Sub woofer Control Jack(MAX-VS940/VS990)
8. AUX-Input
9. Surround Speaker Connector Terminals  
(MAX-VS950/VS990)
10. Sub woofer Speaker Connector Terminals  
(MAX-VS940/VS990)
11. Front Speaker Connector Terminals
12. Voltage Selector (OPTION)

## Where to Install Your Mini-Compact System

To take full advantage of your new mini-compact system, follow these installation instructions before connecting the unit.

- ◆ Install the system on a flat, stable surface.
- ◆ Never place this unit on carpeting.
- ◆ Never place this unit in an outdoor area.
- ◆ Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- ◆ Make sure that you have enough room to open the compact disc compartment easily.
- ◆ Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- ◆ Direct the loudspeakers towards the listening area.
- ◆ For optimum performance, make sure that both speakers are placed at an equal distance above the floor.

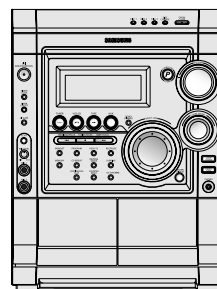


## Connecting your System to the Power Supply

The main lead must be plugged into an appropriate socket.

- ⚡ Before plugging your system into a main socket, you must check the voltage setting (OPTIONAL). If the voltage of the socket does not correspond to the setting on the rear of the unit, you may seriously damage your system.

- 1 Check the position of the **Voltage selector** on the rear of the system (OPTIONAL).
- 2 Plug the main lead (marked **AC Cord** on the rear of the system) into an appropriate socket.
- 3 Press the **ECO/STANDBY/ON** button to switch your mini-compact system on.

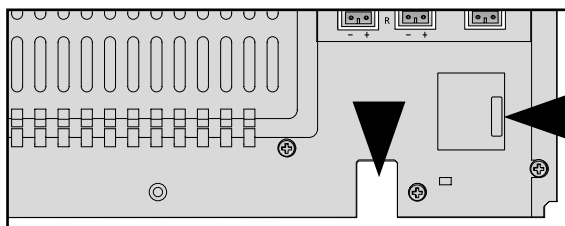


## Inserting Remote Control Batteries


GB

Insert or replace remote control batteries when you:

- ◆ Purchase the mini-compact system
- ◆ Find that the remote control is no longer operating correctly

⚠ When replacing the batteries, use a new set of batteries and never mix alkaline and manganese batteries.

- 1 Place your thumb on the position marked  on the battery compartment cover (rear of the remote control) and push the cover in the direction of the arrow.
- 2 Insert two AAA, LR03 or equivalent batteries, taking care to respect the polarities:
  - ◆ + on the battery against + in the battery compartment
  - ◆ - on the battery against - in the battery compartment
- 3 Replace the cover by sliding it back until it clicks into position.

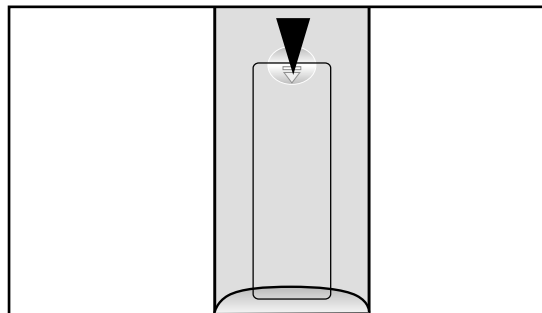


➤ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.

## Connecting the Loudspeakers

Connect the connecting jacks (6) to the back of mini-compact system.

- ◆ Make sure the colors of the speaker terminals match the colors of the connecting jacks.
- ◆ Make sure the polarities (+and -) are correctly.

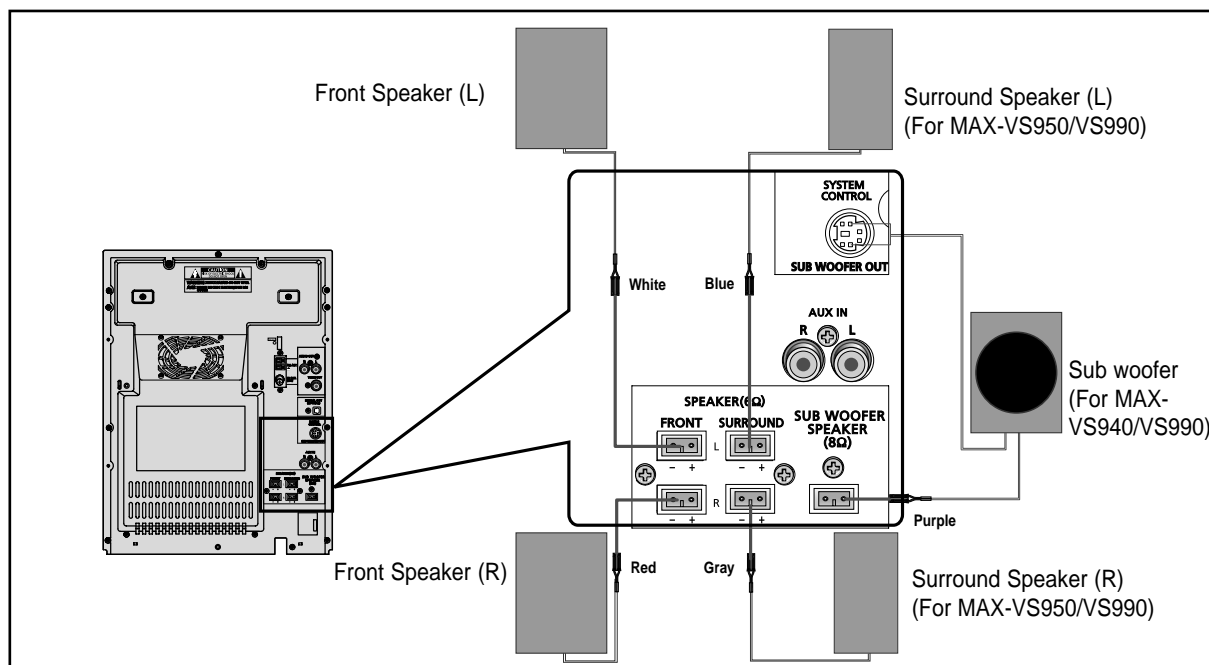

### Directions in Installing Speaker

- ◆ Installation in a place near heating apparatus, under direct lay of light or with high humidity may cause performance degradation of the speaker.
- ◆ Do not install on the wall or on a high place of pole or other unstable place to prevent any safety accident caused by falling of the speaker.
- ◆ Do not take the speaker apart from TV or computer monitor.  
The speaker near the TV or computer monitor may influence the quality of the screen display.

## Connecting to an External Source

The auxiliary input can be used to take advantage of the sound quality of your mini-compact system when listening to other sources.

**Examples:** ♦ A television  
♦ A video disc player  
♦ A Hi-Fi stereo video cassette recorder

➤ To connect the external source, the source must have an audio output. In addition, you need an RCA connection cable.

1 Set the system to standby mode and disconnect it and the external source from the main.

2 Connect the audio cable to the rear of the mini-compact system.

**Connect the... To the connector marked...**

Red jack ..... R (right)  
White jack ..... L (left)

➤ For optimum sound quality, do not invert the right and left channels.



3 Plug the system back into the main socket and press **ECO/STANDBY/ON** to switch it on.

4 Select the AUX source by pressing **AUX**.  
**Result:** **AUX** is displayed.

5 Switch the external source on.

6 Adjust the volume and balance as required:  
♦ Volume ♦ Equalizer

**Example:** You can watch a film and take advantage of stereo sound provided that the original sound track is in stereo (as if you were in a cinema).

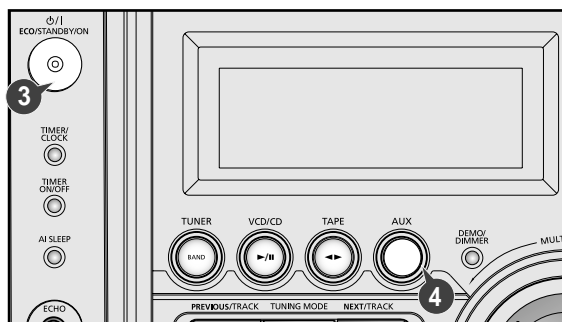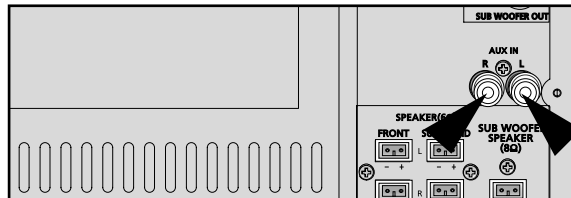


## Connecting to the Equipment

♦ Using the Audio Cord, Connect the Audio Output Terminals (Left, Right) of the System with the Audio Input Terminals (Left, Right) of the Video Input Cassette Recorder, so as to Record VCD.

♦ Using the Video Cord, Connect the Video Output Terminal of the system with the Video Input Terminal of TV.

♦ Turn on the TV and Select the Video mode by pressing the TV/VIDEO SELECT button to the VIDEO Position.

⚠ Please Pay Attention not to Connect the Audio Output Terminals (left, right) of the System with the Audio Input Terminal of TV.

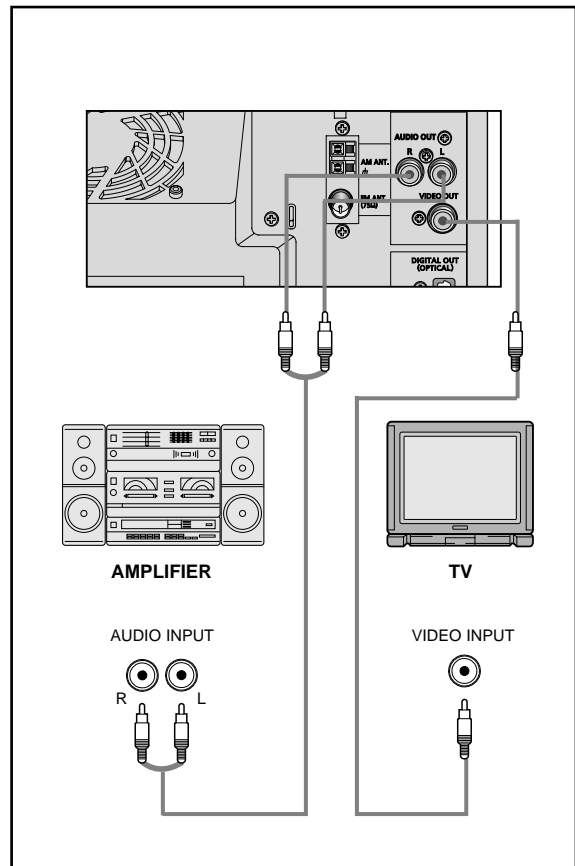


## CD Digital Out Jack(OPTION)

This unit can output CD digital sound signals through this jack. Use an optical cable to connect digital audio equipment.

(DAT deck, MD recorder, etc.).

Remove the dust cap (1) from the CD DIGITAL OUT jack.

Then, connect an optical cable plug to the CD DIGITAL OUT jack.

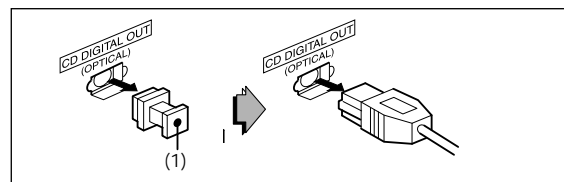

**When the CD DIGITAL OUT jack is not being used.**

Attach the supplied dust cap.

## Connecting the AM (MW/LW) Aerial



GB

The AM aerial (for long and medium waves) can be:

- ◆ Placed on a stable surface
- ◆ Fixed to the wall (you must first remove the base)

The **AM** aerial connector terminals are located on the rear of the system and are marked **AM**.



- ☛ To avoid noise interference, check that the loudspeaker wires do not run close to the aerial wires. Always keep them at least 2 inches (5 cm) away.

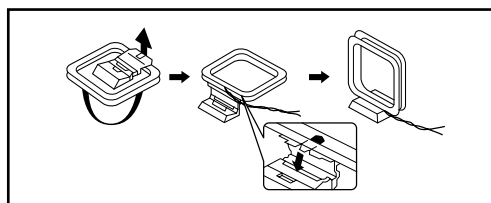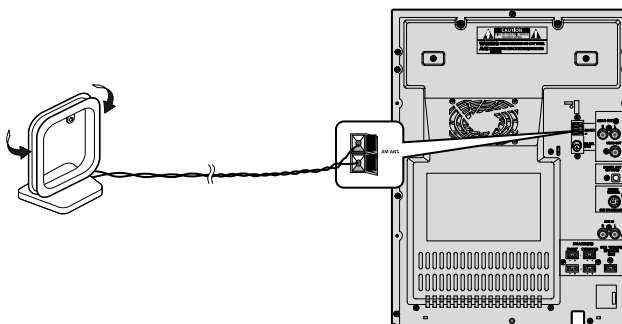

## Connecting the FM Aerial

How to connect a COAXIAL TYPE aerial.


- ◆ Connect a 75Ω antenna to the **FM** antenna terminal.
- ◆ Plug the connector on the **FM** aerial supplied into the coaxial socket (75Ω) marked **FM** on the rear of the system.
- ◆ Follow the instructions given on Page 18 to tune into a radio station, and determine the best position for the aerial.
- ◆ If reception is poor, you may need to install an outdoor aerial.  
To do so, connect an outdoor **FM** aerial to the **FM** socket on the rear of the system using a 75Ω coaxial cable (not supplied).

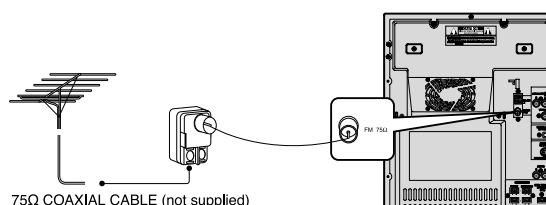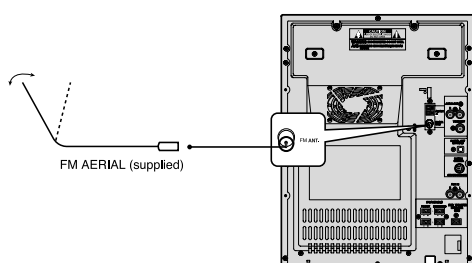

## Connecting the SW Aerial (OPTION)

How to connect a WIRE TYPE aerial.

- ◆ Spread the **SW** aerial out and attach the ends to a wall, in the position providing the best reception.
- ◆ If reception is poor (e.g. distance from transmitter too great, walls blocking the radio waves, etc.), install an outdoor aerial.

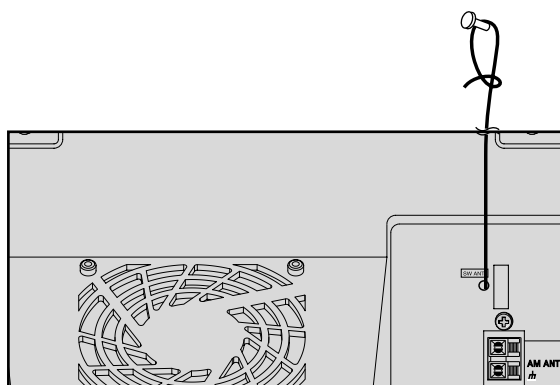


## DEMO/DIMMER function

GB

All functions available on the system can be viewed on the display and the display's brightness can be switched between "on" and "off".

- 1 Press the **DEMO/DIMMER** button.  
Result: All functions available on the system appear on the front panel display.
- Each of these are explained in detail in this guide. Please refer to the relevant section.
- 2 Press the **DEMO/DIMMER** button again.  
Result: The Dimmer function is selected and the display darkens.
- Press the **DEMO/DIMMER** button once again to brighten the front panel display.
- 3 A display brightness control can only be performed while the system power is on.

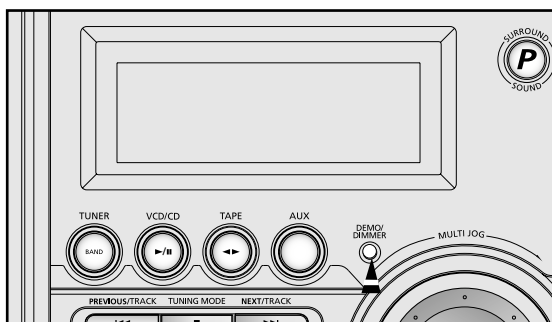


## ECO Mode Function

You can save the power consumption while the unit is turned off (on standby).

- ◆ To activate the ECO mode, Press ECO/STANDBY/ON while the unit is turned off (on standby). The display illumination (including the display demonstration) disappears.

- While ECO mode is activated, the display demonstration is canceled temporarily.

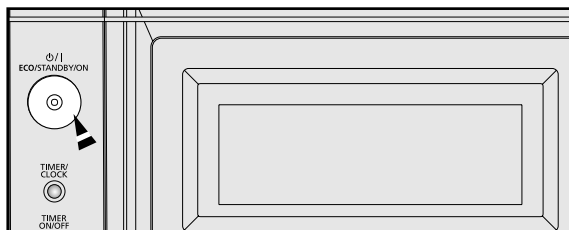

## Setting the Clock

Your system is equipped with a clock which allows you to turn your system on and off automatically. You should set the clock:

- ◆ When you first purchase the mini-compact system
- ◆ After a power failure
- ◆ After unplugging the unit


- For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **ECO/STANDBY/ON**.
- 2 Press **TIMER/CLOCK** twice.  
Result: **CLOCK** is displayed.
- 3 Press **ENTER/DISPLAY**.  
Result: The hour flashes.
- 4 

<b>To...</b>	<b>Turn the MULTI JOG knob to the...</b>
Increase the hours .....	Right
Decrease the hours .....	Left
- 5 When the correct hour is displayed, press **ENTER/DISPLAY**.  
Result: The minutes flash.
- 6 

<b>To...</b>	<b>Turn the MULTI JOG knob to the...</b>
Increase the minutes .....	Right
Decrease the minutes .....	Left
- 7 When the correct time is displayed, press **ENTER/DISPLAY**.  
Result: The clock starts and is displayed, even when the system is in standby mode.

- You can display the time, even when you are using another function, by pressing **TIMER/CLOCK** once.
- ◆ You can also use **◀▶** buttons to instead **MULTI JOG** knob in step 4, 6.

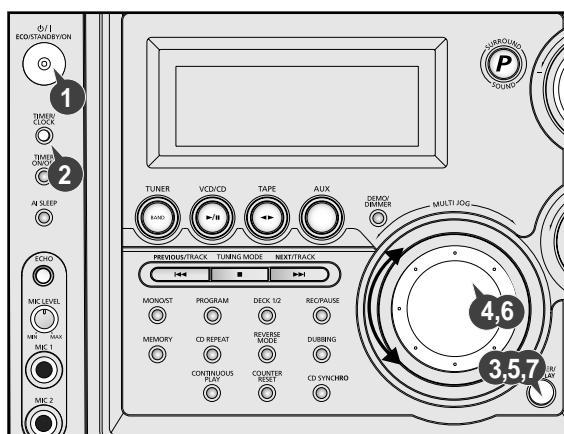

## Loading and Changing Compact Discs

The disc changer can contain up to three 12 cm or 8 cm compact discs without using an adapter.

- ⚠ Never force the compact disc carousel when opening and closing the compartment.  
Never press down or place objects on the carousel.
- Always treat your compact discs with care; refer, if necessary, to the section entitled "Precautions When Using Compact Discs" on page 26.


- 1 Switch the system on by pressing **ECO/STANDBY/ON**.
- 2 Press the **OPEN/CLOSE** (▲) button on the front panel.  
Result: The compartment opens.
- 3 Place one or two discs in the front slots of the carousel, with the label on the discs facing upwards.  
⚠ Check that the compact disc has been correctly inserted in the holder before closing the compartment.
- 4 If you wish to load a third compact disc, press the **DISC CHANGE** button on the front panel (or **DISC SKIP** on the remote control).  
Result: The carousel rotates by 120°.
- 5 Close the compartment by pressing the **OPEN/CLOSE** (▲) button again.  
➤ If you wish to start playing a disc directly, you can also proceed as follows.

To play...	Press...
Disc 1 .....	VCD/CD (▶/  ) or Disc 1
Disc 2 .....	Disc 2
Disc 3 .....	Disc 3

Result: The compartment closes automatically and the disc selected starts playing.

- 6 To change or unload the compact disc changer, repeat Steps 2 to 5.

- ⚠ Keep the compartment closed whenever you are not using it, to prevent dust from entering.
- ♦ You can load or unload compact discs when the radio, tape or auxiliary source function is selected.
- ♦ The function will be automatically entered VCD/CD from the other source when you press CD OPEN/CLOSE button.

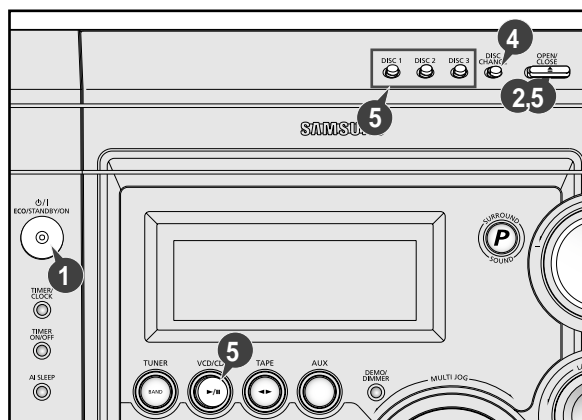


## To replay the CD/MP3

This is a player that enables the playback of audio CD, CD-R, CD-RW, MP3-CD, VCD but does not possess the function that saves MP3 files.

- ⚠ Do not use CDs of irregular shapes like heart or octagon shapes. The performance of the player may be degraded.
- At least more than one CD should be inserted for playbacks.

- 1 Press the **ECO/STANDBY/ON** button to switch on the power.
- 2 Press the **VCD/CD** (▶/||) of the main unit to select the CD function.
- 3 Insert more than one CD or a MP3-CD.
- 4 Press the **VCD/CD** (▶/||) button on the front panel or the ▶/|| button of the remote control.  
➤ ♦ If there is more than one CD or an MP3-CD inserted, replays are then processed in order.  
♦ Your CD Player will take a few moments to scan through all the tracks recorded on a particular MP3-CD.
- 5 Adjust the volume according to needs with the following procedures.  
♦ Turn the **VOLUME** control on the front panel  
or  
♦ Press the **VOLUME +** or **-** button on the remote control.  
➤ The volume level can be adjust in 31 steps (VOL MIN, VOL 1- VOL 29, and VOL MAX). And press **ENTER/DISPLAY** button to select the horizontal display or the vertical display in it.
- 6 If it is desired to stop while the playback is processing, press the **VCD/CD** (▶/||) button.  
➤ Press the **VCD/CD** (▶/||) button once again to playback again.
- 7 To stop playback, press the ■ button.  
➤ ♦ A new disc may be inserted in the remaining two compartments excluding the CD which is being played back. Press the **DISC CHANGER** button to open the CD tray. The revolving part does not turn during playbacks.  
♦ If there is not even one CD inserted in the CD tray, it is indicated as "NO DISC".  
♦ If the CD Repeat function is not selected, 3 CDs are played back which automatically stops.

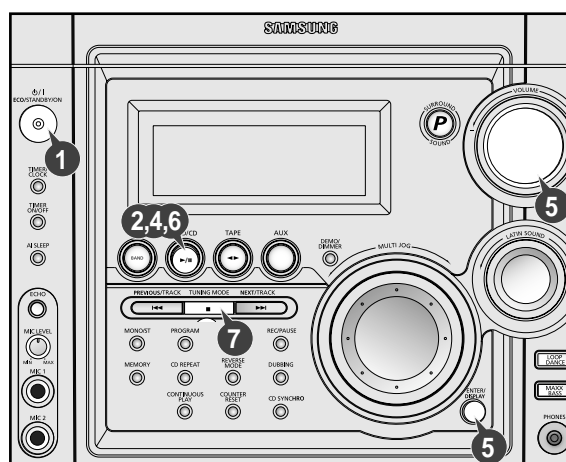

## Selecting a CD in the Disc changer


GB

The CD function is automatically selected when Disc Skip is pushed.

To select a specific disc, press the corresponding DISC (1, 2, 3) button on the front panel or DISC SKIP on the remote control, until the required disc indicator flashes.

**Result:** All the discs will be played in turn, starting with the one selected.

- If you wish to play the current disc only, press CD REPEAT on the front panel one or more times, until **1 CD** is displayed.
- ♦ If you use the DISC (1, 2, 3) function when listening to the radio or to a tape, the system switches automatically to the CD mode.
- ♦ If the disc selected is not loaded, the next disc is played automatically.

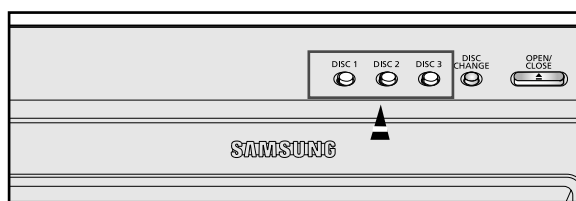

## What is MP3?

MP3 means MPEG1 Layer 3, the global standard for audio signal compression technology. It uses digital compression technology to compress original sound data by up to 12 times without sound quality degradation.

## File Compatibility

- ♦ The unit will playback files created in MP3 format (Mpeg1.Layer3) with \*.mp3 as their extension.
  - ♦ Playback will be impossible for the file of MP2 or 22KHz.
  - ♦ ID3\*tags cannot be shown on the display.
- \*An MP3 file can contain file information called "ID3 Tag " where its album name, performer, track title, etc. are recorded.

## How many MP3 files can a CD-R or CD-RW disc record?

The maximum capacity of one CD-R or CD-RW disc is 680MB.

Normally, one MP3 file has a capacity of 4MB, therefore approximately 170 files can be recorded on a single disc.


## Regarding the playback of CD-R/RW

- ♦ In the case of an original CD-R(Recordable) recorded in audio CD format, CD-RW(Rewritable) and editing by the user, playback is processed on the respective completed status. (The player may not be played back according to the characteristics of the CD or recorded status.)
- ♦ The CD-RW is comparably less reflexive than CD which causes more time delay to read.

## MP3-CD PLAYBACK

### HOW TO PLAYBACK MP3-CD directly

- 1 After inserting MP3-CD in the Set, Press **▶▶** button or Number button after Reading.
- 2 You can see the information of Disc on the TV.

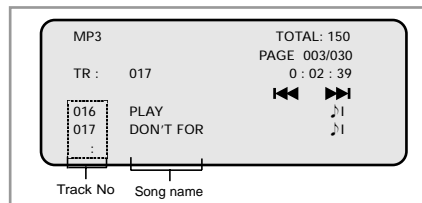


♪ 1 : MP3 File display


7 tracks on the PAL TV screen every time; 5 tracks on the NTSC TV screen every time. Select the No of song on the remote control Digits button and you can enjoy the Music.

### HOW TO PLAYBACK MP3-CD on MENU MODE

- 1 After inserting MP3-CD in the Set, Press the "DISC VIEW" button.
- 2 You can see the following information of Disc on the TV.

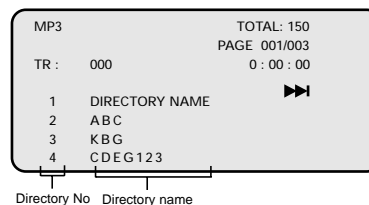

Select the Number of Directory. You can see the following Display.

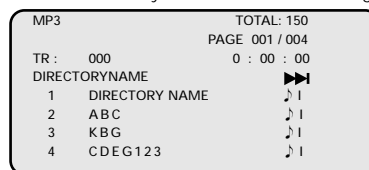

Select the No of song on the remote control Digits button and you can enjoy the Music.


## Selecting a Track

You can select the track you wish to listen to, either when the compact disc player is stopped or when a disc is playing.

**To start playback at the beginning of the... Turn the MULTI JOG knob...**

Next track .....	One notch to the right
Current track .....	One notch to the left
Previous track .....	Two notches to the left
Track of your choice .....	The appropriate number of notches to the right or to the left

- ♦ You can also use the **◀◀** and **▶▶** buttons on the front panel, or the **◀◀** and **▶▶** buttons on the remote control to select a track.

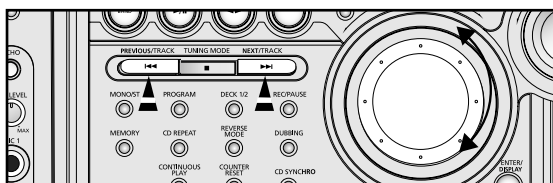




## Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

- It is recommended that you turn the volume down before using this function.

To search through the tracks...	Press and hold down...
Forwards .....	▶▶ for at least one second
Backwards .....	◀◀ for at least one second

You can also press and hold down ◀◀ / ▶▶ on the front panel to auto search through the tracks.

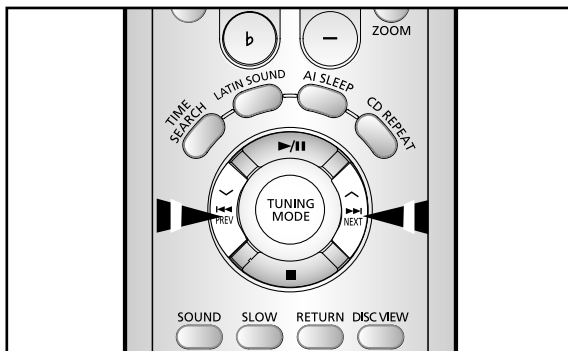


## Function to skip through 10 tracks at a time


Press the +10/0 button briefly while playing back a CD and VCD. The track 10 tracks after the current one will then be played back.

**Example:** If you want to select track 43 during playback of track 15, press the +10/0 button four times, and then press the ▶▶ button three times or Digit 3 button once.

15 → 10 → 20 → 30 → 40 → 41 → 42 → 43



- In selecting a track on MP3-CD, digit "0" will be entered if the button of +10/0 is pressed.  
**Example:** If you want to select a track 40 during the playback of a certain track, press both buttons of 4 and +10/0.

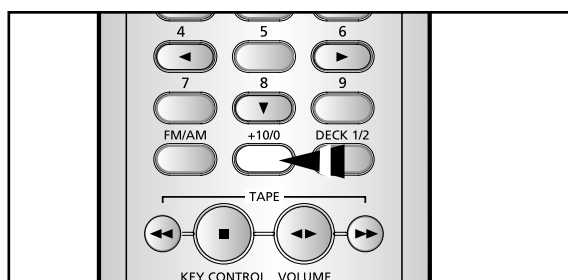


## Continuous Play

(This function is only available during playback of a CD.)

You can select "CONS ON" and "CONS OFF" during playback of a CD.

- 1 Press the **CONTINUOUS PLAY** button once.  
**Result:** "CONS ON" is displayed.  
 ♦ The interval time between the tracks can be shorten.
- 2 Press the **CONTINUOUS PLAY** button again.  
**Result:** "CONS OFF" is displayed.  
 ♦ Cancel this function, return to normal playback.

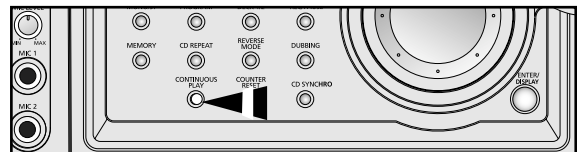


## Repeating One or All Tracks on the Compact Discs

You can repeat indefinitely:

- ♦ A specific track on a compact disc.
- ♦ All tracks on the compact disc selected.
- ♦ All discs loaded in the carousel


- 1 **To repeat...** **Press CD REPEAT on the Front Panel once or more times until...**  
 The current track indefinitely ..... **REPEAT 1** is displayed  
 The selected disc ..... **REPEAT 1 CD** is displayed  
 All discs loaded ..... **REPEAT ALL CD** is displayed
- 2 When you wish to stop the Repeat function, press **CD REPEAT** until **ALL CD** or **1 CD** is displayed, or press ◀.

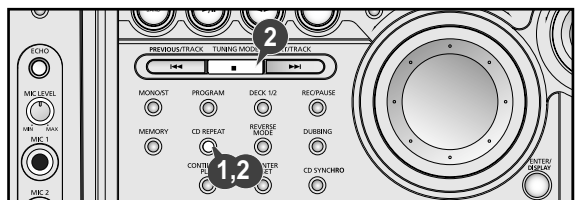

## Last Memory Function

(This function is only available during playback of MP3-CD.)

When MP3-CD playback is selected again after your CD player has been stopped or turned off, this function allows playback from the start of the track that you last listened to.

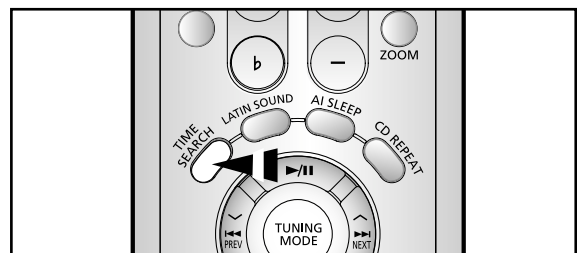

## Programming the Order of Playback

You can decide:

- ◆ The order of the track desired to listen
- ◆ The track not desired to listen
- ◆ A maximum of up to 30 order of tracks desired to listen may be programmed.
- ◆ Before selecting the track, the CD player should be stopped.
- ◆ This function may be used simultaneously with the CD Repeat function.

1 If the CD function is selected, stop the player by pressing ◀.

2 Load the selected CDs.

3 Press **PROGRAM**.

Result: The following indications are displayed:

PRGM 01 C DI - - - -

(01 = Program no., DI = Disc no., - - - - = Track no. on the disc)

4 If necessary, select the disc containing the required track by pressing the corresponding **DISC** (1, 2, 3) button.

5 Select the required track by turning the **MULTI JOG** knob:

- ◆ To the left to move back through the tracks
- ◆ To the right to move forward through the tracks

6 Press **PROGRAM** to confirm your selection.

Result: The selection is stored and 02 P DI - - - - is displayed.

7 To select other tracks, repeat Steps 4 to 6.

8 Press **VCD/CD** (▶/||) to listen to the track selection in the order programmed.


9 To... Turn the **MULTI JOG** knob...

Listen to the current track again .....	One notch to the left
Listen to the previous track .....	Two notches to the left
Listen to the next track .....	One notch to the right
Skip forwards or backwards one .....	The appropriate number of notches to the right or to the left

10 To cancel the selection, press ◀.

- ◆ Once if the compact disc player is stopped
- Result: **PRGM** is no longer displayed.

- ◆ If you open the compartment, the selection is cancelled.
- ◆ If you select the number of a disc which is not loaded or a track which does not exist on the CD, the selection skips to the next programmed track.
- ◆ You can also use the ◀ / ▶ buttons to select the required tracks in step 5, 9.

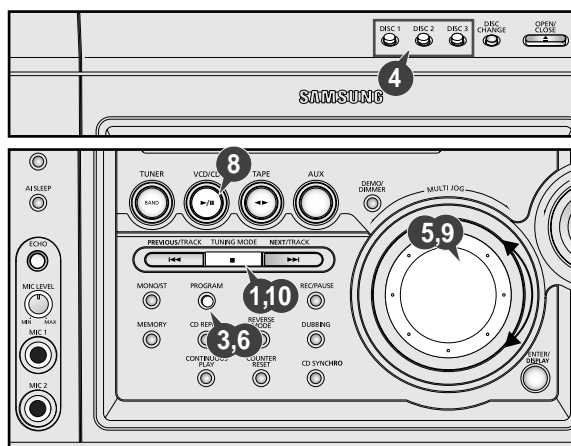

## Checking or Changing Programmed Tracks

You can check or change your selection of tracks at any time.

1 Press ■ once if you have started listening to the selection.

2 Press **PROGRAM**.

Result: The following indications are displayed:

PRGM 01 C DI - - - -

(C = Check, 01=Program No, DI = Disc No, - - - - = Track No on the disc)

- If you have already programmed 30 tracks, **C** is displayed instead of **P** when you press **PROGRAM**.

3 Press **PROGRAM** again.

Result: The first track selected is displayed, together with the letter **C** (Change).

4 Press **PROGRAM** one or more times until the track to be changed is displayed.

5 If necessary, press the corresponding **DISC** (1, 2, 3) button to change discs.



6 Press ◀ and ▶ or turn **MULTI JOG** to select a different track.

7 Press **PROGRAM** to confirm your change.

8 Press **VCD/CD** (▶/||) to start listening to the selection.

Result: The first track selected is played.

- When selecting the tracks of numbers larger than 3 digit figures (figures from the number 100), please use the **Digit** buttons.

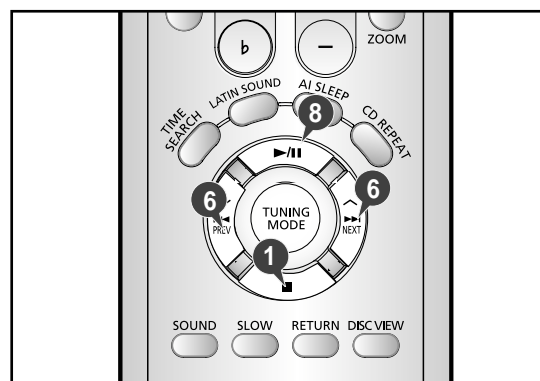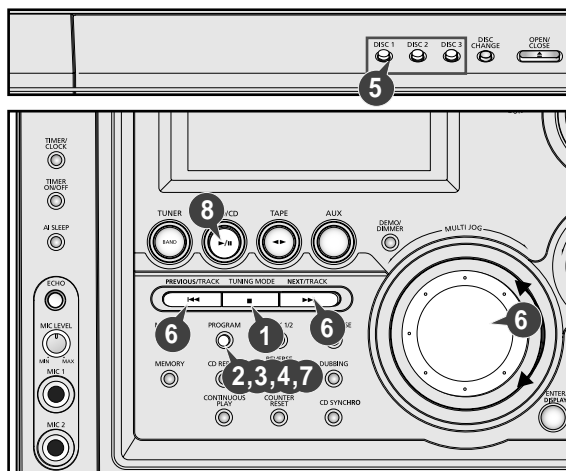


## Video CD Player Playback

In order to playback video VIDEO-CD('S), make sure that your unit is connected to your TV set.

This unit is designed for playback of video CD('S), version 1.1 and 2.0. Only with version 2.0, is it possible to call up the on screen menu function. This unit will not play back any other video VIDEO-CD('S) other than 1.1 and 2.0 versions.

- 1 Turn on the **ECO/STANDBY/ON** switch and set the VCD mode.
- 2 Press the **OPEN/CLOSE** (▲) button on the unit, to open the CD tray.  
Result: "OPEN" is displayed and CD tray slides open.
- 3 Load a video-CD('S) with the label facing upwards in the tray.
- 4 Press the **OPEN/CLOSE** (▲) button again to close the CD tray.
- 5 To playback:
  - ◆ In version 1.1, press the ►/|| button for direct access to the film, as there is no menu-on-screen.
  - ◆ In version 2.0, load a video CD, "Video CD2.0", and "MENU ON" are displayed on the TV screen. Press the ►/|| button and the menu is displayed on the TV screen. Select a number from the menu using **Digits** button on the remote control or **MULTI JOG** knob and press the **VCD/CD** (►/||) button.
- To return to the previous menu, press the **RETURN** button on the Remote control or **ENTER/DISPLAY** button on the front panel.
- ◆ When playing a video-CD('S) version 2.0, reading time on the display may take longer, depending on the disc's contents.
- 6 Press ►/|| button on the remote control to receive a still picture.  
Result: Pause is displayed, a still picture appears and the sound is muted.
- 7 To return to normal playback, press **VCD/CD** (►/||) button.
- 8 Press the Stop (■) button to stop playback.

- ◆ Please make sure that the VIDEO-CD('S) to be played is not flawed optically, as this may cause a distorted sound or the unit to malfunction.

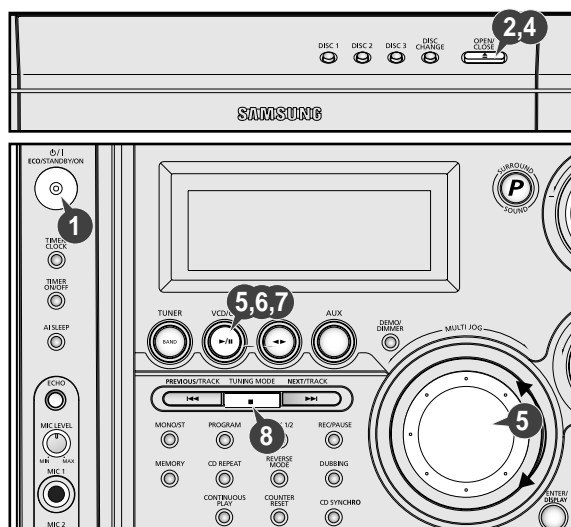

## Search Functions


You can find a certain passage faster during playback. This function is possible in CD or VCD Ver 1.1 or Ver 2.0 menu off mode.

- 1 To... Press and hold down...  
Scan forwards ..... ►►  
Scan backwards ..... ◀◀
- 2 Release the **SKIP/SEARCH** buttons when the desired passage has been found.

➤ In the video CD version 1.1, where the disc's contents are over 15 minutes long, you can scan up or down by intervals of five minutes.

- 3 To... Press...  
Scan forwards by 5 minute intervals ..... ►►  
Scan backwards by 5 minute intervals ..... ◀◀  
Result: The picture is still, and the disc's contents are forwarded or reversed by 5 minute intervals. Playback then resumes from this new position.

➤ In the SKIP/SEARCH or SCAN mode, the sound can only be partially heard and the picture scenes will change sporadically, until the required passage has been found.

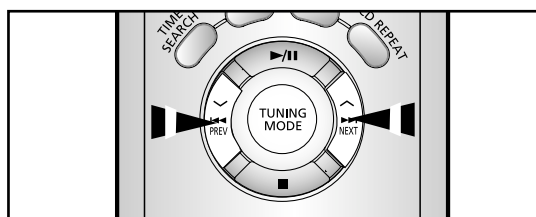


## Time Search Function

(This function is available only during the playback of a CD/VCD)

Please use this function for reproducing a desired track in a certain time of playback.

- 1 Press the **TIME SEARCH** button.
- 2 Set a desired time by pressing the **DIGIT** buttons.
- 3 Press the **PLAY** (►/||) button.

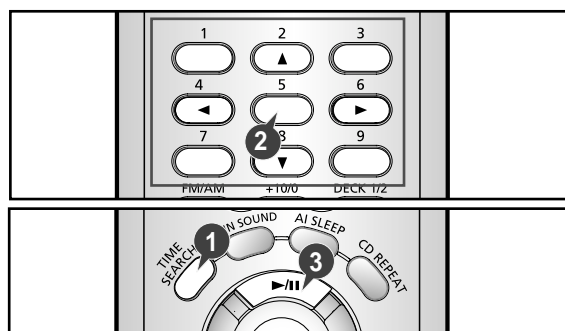

## When adjusting play speed

Turn on the TV and set video mode.



Press the **SLOW** button on the remote controller when the play function is on.

- ◆ Voices do not come out when the **SLOW** button is pressed.
- ◆ Slow playing is 1/2, 1/4, 1/8 the normal playing speed.

To return to normal operation.

- ◆ Press the **VCD/CD** (▶/||) button.

➤ When the slow mode or frame mode is selected a disc will only forward operation.

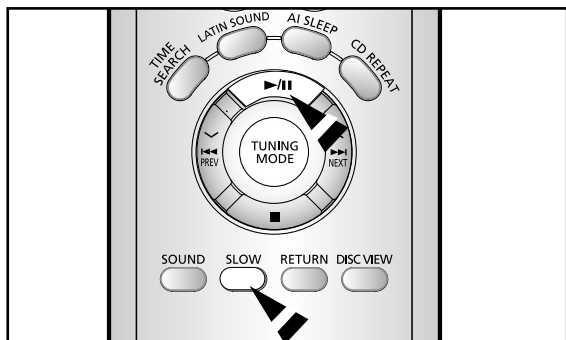
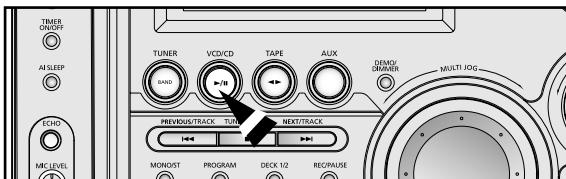


## NTSC/PAL Selection Method

According to a DISC or TV, Press the **REC/PAUSE** button on the front panel.

Set the system to standby(power off) mode, press the **REC/PAUSE** button on the front panel.

**Result:** Each time the **REC/PAUSE** button is pressed, the following appears in the display:

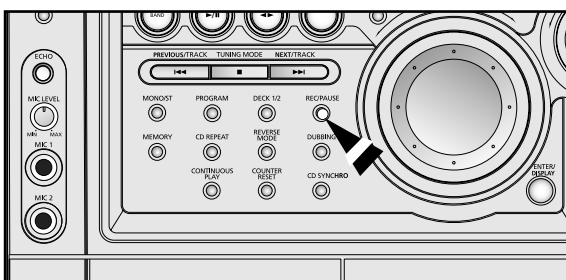


## Sound Selection Function

With this function, you can playback video CD's that provide 2-channel tone(bilingual) in the original language. Similarly, with karaoke video CD's, you can select between the channel for music without vocals for sing-along purpose, or the channel complete with music and vocals.


During playback, press the **SOUND** button on the remote control.

**Result:** Each time the **SOUND** button is pressed, the following appears in the display and on the TV screen:



- ◆ **Lch MONO** : Only the left channel (instrumental parts) is played back through both the right and left speakers.
- ◆ **Rch MONO** : Only the right channel (vocal parts) is played back through both the right and left speakers.
- ◆ **STEREO** : Cancels the Multiplex Sound (normal stereo playback resumes).

➤ You can select between listening to the tone from the left channel, the right channel or both channels.

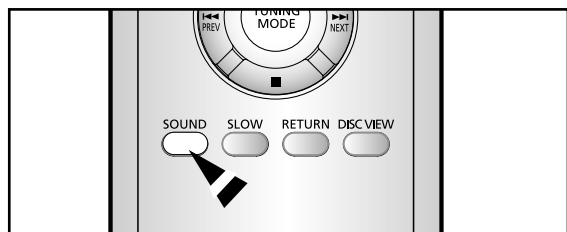

## KEY CONTROL Function


This function can work only at VCD mode when microphone is connected.

Press the **KEY CONTROL** button to adjust the key to your voice. (the 15 step key control you can select )

**Result:** Each time the **KEY CONTROL #, b** button is pressed, the following appears on the TV screen: "**KEY #-**"

- b** : Low-Pitched Key
- #** : High-Pitched Key

➤ Key control function and VCD slow playing do not work at the same time

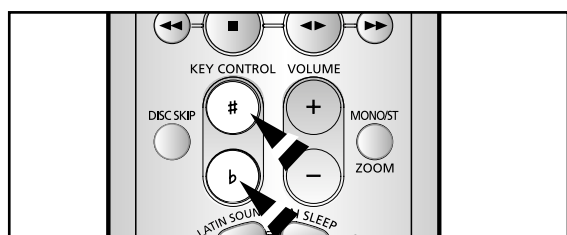


## VCD View function

This function can be used conveniently to search a desired track in a VCD. This function is possible in CD or VCD Ver 1.1 or Ver 2.0 menu off mode.

### When you want to select a track


- 1 Press the **DISC VIEW** button in the pause state.  
Result: "TRACK VIEW" menu is displayed on the screen.  
The screen is split into 9 with each screen picture being reproduced for 4 seconds.
  - Press NEXT(▶▶) button to see the rest tracks.
  - Press PREV.(◀◀) button to see the previous tracks.
- 2 Select a track by pressing the **Digits** buttons.
- 3 Press the (▶||) button.  
Result: The picture that you selected is displayed in full screen.
- 4 When you wish to stop the DISC VIEW function, press ■ button.
  - ♦ **When using more than 10 tracks :**  
Press the **Digits** and **+10/0** button, select the desired track number (Reference page 14).
    - Press NEXT(▶▶) button to see the next track.
    - Press PREV.(◀◀) button to see the previous track.

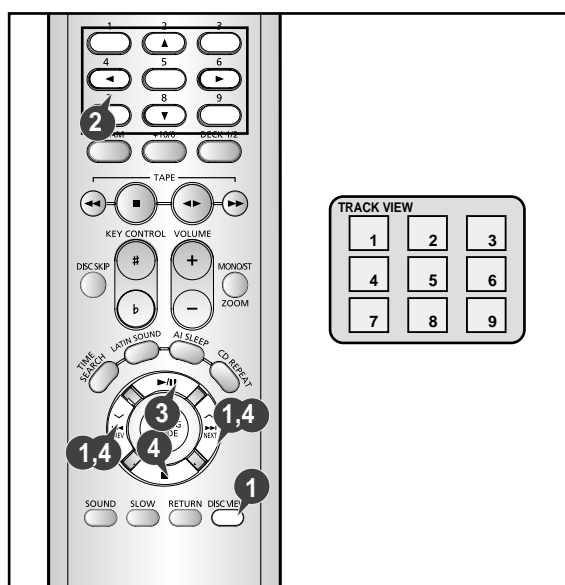

### When you want to select an INDEX

This function is convenient to search a desired scene as it displays a track reproduced by time.


- 1 Reproduce the pictures by pressing the (▶||) button.
- 2 Press the **DISC VIEW** button.  
Result: "INDEX VIEW" menu is displayed on the screen.  
The screen is split into 9 with each screen picture being reproduced for 4 seconds.
- 3 Reproduce the pictures by pressing a desired **Digits** button.  
Result: The one of nine picture is displayed in full screen.

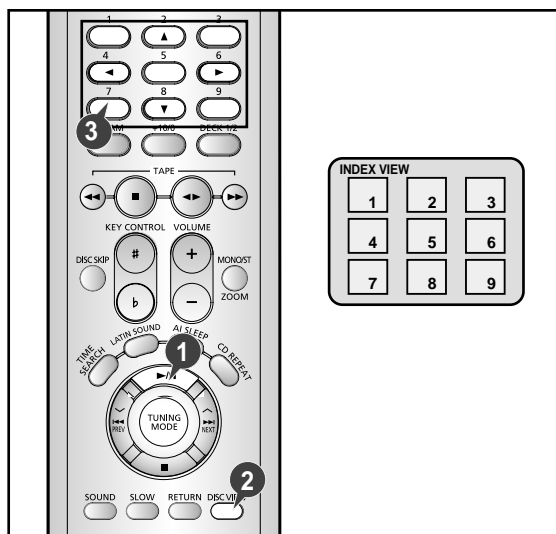

## ZOOM Function

- 1 Press **ZOOM** button during playback.  
Result: The picture being reproduced will be enlarged twice as large as the previous one.
- 2 Press **ZOOM** button once more in the state of double sized zoom.  
Result: The picture being reproduced is enlarged four times as large as the initial one.
- 3 Press **ZOOM** button in the state of four times sized zoom.  
Result: The picture will return to the initial size.

♦ During operating the zoom function, if you want to move the picture upward/downward/leftward/rightward, please press the respective **Digits** button (2,4,6,8).

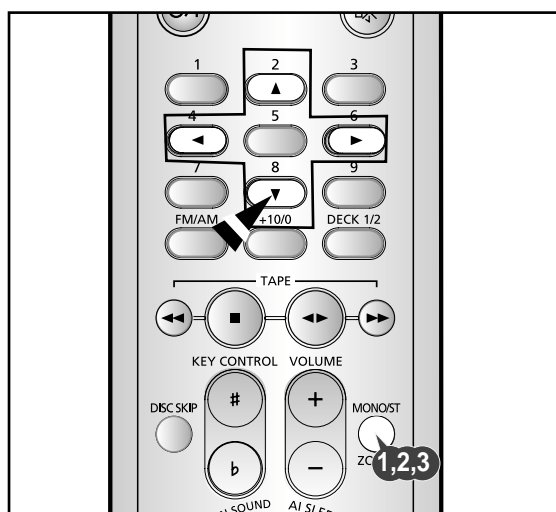

## Searching for and Storing the Radio Stations





You can store up to:

- ◆ 15 FM stations      } OPTION
- ◆ 15 AM stations      }
- ◆ 15 FM stations      }
- ◆ 8 AM(MW) stations      } OPTION
- ◆ 7 LW stations      }
- ◆ 15 FM stations      }
- ◆ 5 MW stations      } OPTION
- ◆ 5 SW1 stations      }
- ◆ 5 SW2 stations      }

- 1 Switch the system on by pressing **ECO/STANDBY/ON**.
- 2 Select the **TUNER** function by pressing **TUNER**.
- 3 Select the required frequency band by pressing **TUNER (Band)** again on the front panel or **TUNING MODE** on the remote control.  
Result: The appropriate indication is displayed:
 

◆ <b>FM</b>	Frequency Modulation
◆ <b>AM(MW)</b>	Medium Wave
◆ <b>LW(OPTION)</b>	Long Wave
◆ <b>SW1, SW2(OPTION)</b>	Short Wave
- 4 To search for a station... Press **TUNING MODE** on the front panel or on the remote control  
 Manually ..... One or more times until **MANUAL** is displayed.  
 Automatically ..... One or more times until **AUTO** is displayed.
- 5 Select the station to be stored by:
  - ◆ Turning the **MULTI JOG** knob to the right or to the left to increase or decrease the frequency respectively  
 or
  - ◆ Pressing **TUNING**  $\vee$  or  $\wedge$  on the remote control
  - ◆ To scroll through the frequencies faster when searching manually, hold down the **TUNING MODE DOWN OR UP** buttons.
  - ◆ The automatic search procedure may stop on a frequency that does not correspond to a radio station. If this happens, use the manual search mode.
- 6 Adjust the volume by:
  - ◆ Turning the **VOLUME** knob on the front panel  
 or
  - ◆ Pressing the **VOLUME+** or **-** buttons on the remote control
- 7 Select the FM stereo or mono mode by pressing **MONO/ST**.
- 8 If you do not want to store the radio station found, revert to Step 4 and search for another station.  
 Otherwise:
  - a Press **MEMORY**.  
Result: The **PRGM** is displayed for a few seconds.
  - b Press **TUNING MODE DOWN AND UP** to assign a program number between 1 and 15.
  - c Press **MEMORY** to store the radio station.  
Result: **PRGM** is no longer flashed and the station is stored.
- 9 To store any other radio frequencies required, repeat Steps 3 to 8.


- ◆ The **PROGRAM** function can be used to assign a new station to an existing program number.

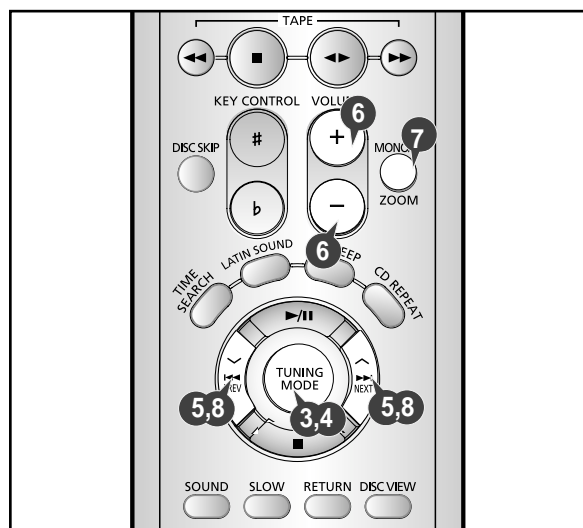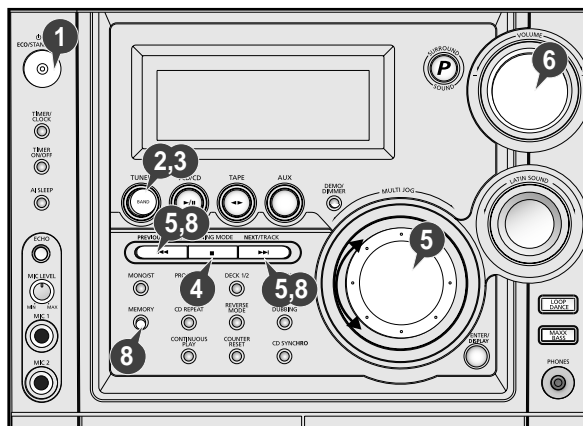

## Selecting a Stored Station

You can listen to a stored radio station as follows:


- 1 Switch the system on by pressing **ECO/STANDBY/ON**.
- 2 Select the **TUNER** function by pressing **TUNER** (Band) on remote control.
- 3 Select the required frequency band by pressing **TUNER** (Band) on the remote control or **TUNER** (Band) again on the front panel.
- 4 Press the **TUNING MODE** button on the front panel of the unit, or the **TUNING MODE** button on the remote control until **"PRESET"** is displayed.
- 5 Turning **MULTI JOG** on the front panel left or right until the desired station is found or press **◀/▶** to select the desired station, or  
Select the desired station by pressing the station number stored, using the **TUNING** **∨** or **∧** button on the remote control.  
**Result:** The desired station is now received.

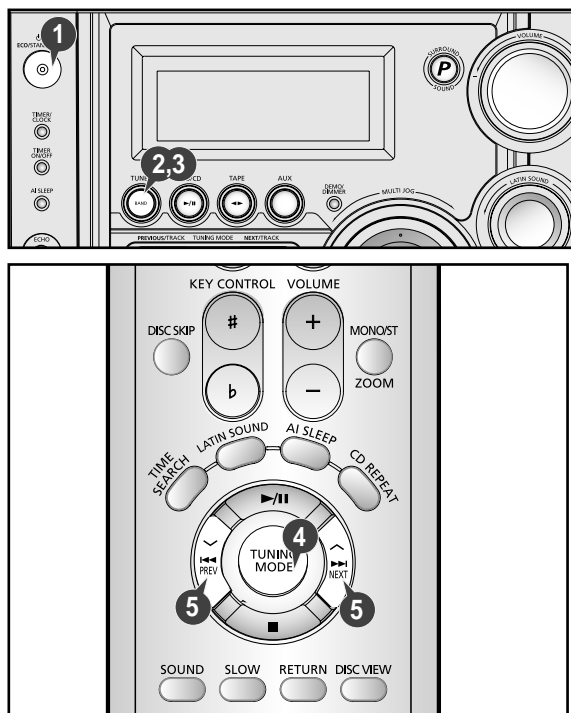

## Improving Radio Reception

You can improve the quality of radio reception by:

- ♦ Rotating the FM or AM(MW) aerial
  - ♦ Testing the positions of the FM and AM(MW) aerials before fixing them permanently
- If reception from a specific FM radio station is poor, press **MONO/ST.** to switch from stereo mode to mono. The quality of the sound will be improved.

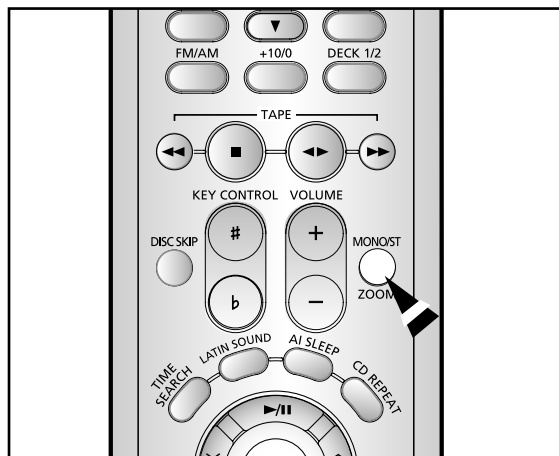



## Listening to a Cassette



- Always treat your cassettes with care; refer, if necessary, to the section entitled **"Precautions When Using Audio Cassettes"** on page 26.

- 1 Switch the system on by pressing the **ECO/STANDBY/ON** button.
- 2 Select the **TAPE** function by pressing **TAPE** on the front panel.
- 3 Open either cassette deck 1 or 2 by pushing and releasing the deck cover where **PUSH EJECT** (▲) is written.
- 4 Insert the pre-recorded cassette with the open edge of the tape facing downward.
- 5 Close the deck by pushing on it until it clicks into place.  
**Result:** Depending on the deck selected, the 1 or 2 indication is displayed in front of the counter number.
- 6 If you have inserted two cassettes, press **DECK 1/2** on the front panel or directly the **DECK 1/2** button on the remote control to select the cassette to be played.  
**Result:** Depending on the deck selected, the TAPE 1 or TAPE 2 indication is displayed.
- 7 

To listen to...	Press ...
Side A .....	TAPE (◀▶) once (DECK 1 and DECK 2)
Side B .....	TAPE (◀▶) twice (DECK 2 --- VS940/950/990)
Side B .....	TAPE (◀▶) twice (DECK 1 --- VS950/990)

  
**Result:** The cassette starts playing.

- 8 When the cassette is stopped, select one of the following functions as required.

### Main Unit


To...	Press ...
Rewind the cassette .....	◀◀
Fast-forward the cassette .....	▶▶

### Remote Control

To...	Press ...
Rewind the cassette .....	◀◀
Fast-forward the cassette .....	▶▶

- 9 

To...	Press...
Stop the playback or search .....	■

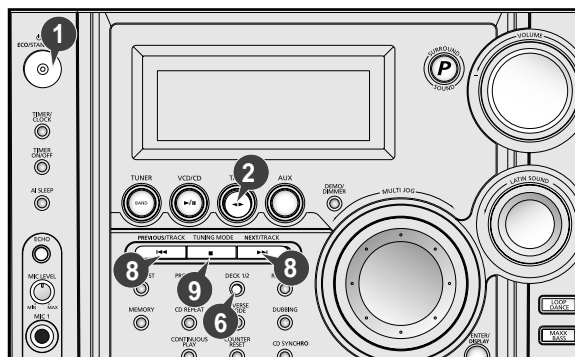

## CD Synchro Record Feature


You can record a compact disc on a cassette in two different ways:

- ◆ Synchronised recording
- ◆ Direct recording

### Synchronised recording

This feature enables you to synchronize the start of the recording with the start of the disc or track of your choice.

- 1 Switch the system on by pressing **ECO/STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **VCD/CD** function by pressing **VCD/CD** on the front panel.
- 4 Load a compact disc.
- 5 Select the required disc.
- 6 Select the required track and press **CD SYNCHRO** or press **CD SYNCHRO** directly to start recording at the beginning of the disc.  
**Result:** "REC" is displayed in red and recording starts.
- 7 To stop recording, press ■.

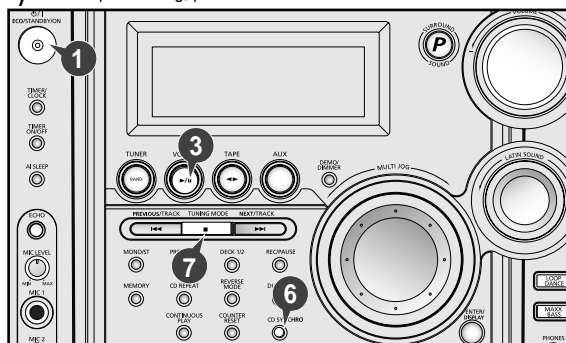


### Direct recording

The direct recording mode enables you to start recording with any track on the compact disc.

- ◆ You can only record on cassettes in Deck 2.
- ◆ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch your system on by pressing **ECO/STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **VCD/CD** function by pressing **VCD/CD** on the front panel.
- 4 Load the compact disc.
- 5 Select the required disc.
- 6 Select the required track on the compact disc and press **▶/II** on the front panel or **▶/II** on the remote control to set the compact disc player to Pause mode.
- 7 Press the **REC/PAUSE**.  
**Result:** "REC" is displayed in red and recording starts.
- 8 Press the **▶/II** to start playing the track.  
**Result:** The track is recorded on the cassette.
- 9 To stop recording, press ■.

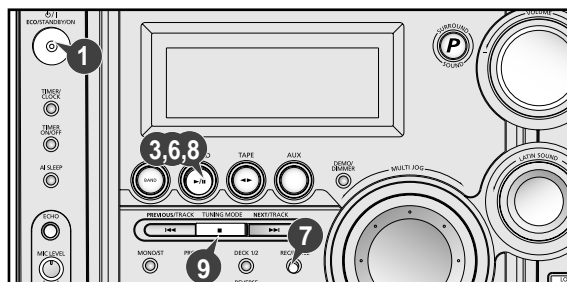




## Recording a Radio Program

You can record a radio program of your choice.

- ♦ You can only record on cassettes in Deck 2.
- ♦ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch the system on by pressing **ECO/STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **TUNER** function by pressing **TUNER**.
- 4 Select the radio station that you wish to record by pressing **TUNING**  $\wedge$  or  $\vee$  on the remote control or by press the **◀/▶ DOWN** or **UP** on the front panel.
- 5 Press **REC/PAUSE**.  
Result: "REC" is displayed in red and recording starts.
- 6 To stop recording, press **■**.

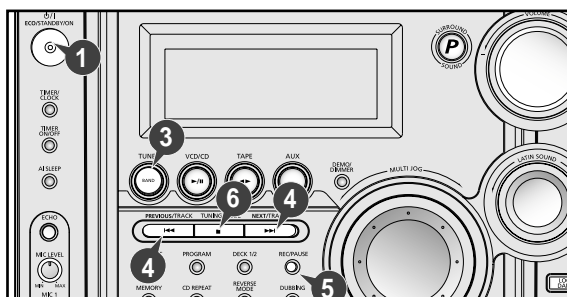


## Copying a Cassette (Dubbing)

You can copy a cassette from Deck 1 to Deck 2.

Two options are available:

- ♦ Normal speed dubbing
- ♦ You do not need to adjust the volume, as it has no effect on the recording.
- ♦ Take care not to insert the tape to be copied in Deck 2, as it will be erased when you start recording.

- 1 Switch your system on by pressing **ECO/STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Insert the tape to be copied in Deck 1.
- 4 **To copy a cassette at... Press...**  
Normal speed ..... **DUBBING**  
Result: The appropriate indications are displayed and the cassette in Deck 1 is copied to the cassette in Deck 2.
- 5 To stop dubbing, press **■**.

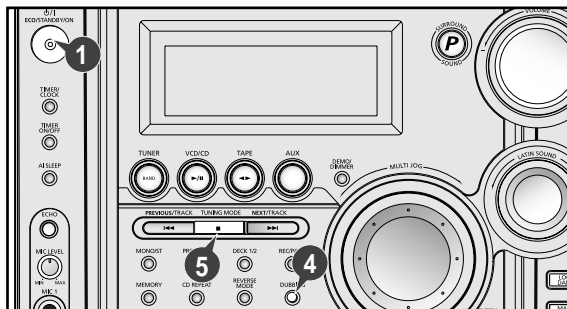

## Selecting the Cassette Playback Mode


Your mini-compact system has three cassette playback modes which enable you to listen to both sides of a cassette automatically.

Press Reverse Mode until the appropriate symbol is displayed.

When the display indicates... The mini-compact system plays back...

- ⇌ ..... One side of the selected cassette and then stops.
- ↺ ..... One side of the cassette. The other side of the cassette and then stops.
- ↻ ..... Both sides of the cassette indefinitely until you press stop.

- **MAX-VS950/VS990** ---- Deck 1 ,Deck 2
- MAX-VS940** ---- Deck 2 only

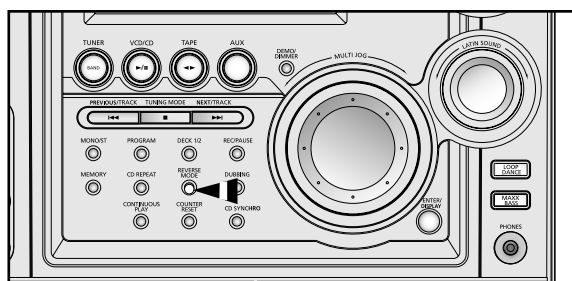


## Tape Counter

When playing a cassette, a counter is displayed to enable you to take note of the counter value at the start of each track and thus start playback at the beginning of the track to which you wish to listen.

- The counter is only displayed when a cassette is being played.

Before starting to record a cassette for which you wish to take note of the counter values at the beginning of each track, reset the counter by pressing **COUNTER RESET**.

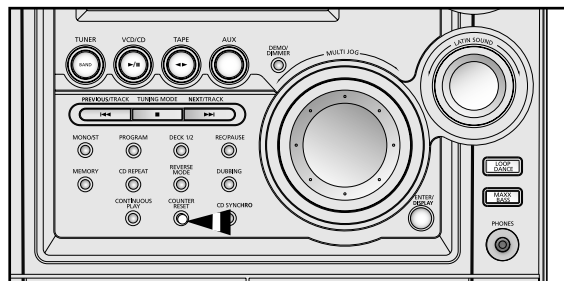

## Timer Function



The timer enables you to switch the system on or off at specific times.

**Example:** You wish to wake up to music every morning.


➤ If you no longer want the system to be switched on or off automatically, you must cancel the timer.

- ◆ Before setting the timer, check that the current time is correct.
- ◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **ECO/STANDBY/ON**.
- 2 Press **TIMER/CLOCK** until ☹ **TIMER** is displayed.
- 3 Press **ENTER/DISPLAY**.  
**Result:** **ON TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.
- 4 Set the timer switch-on time.
  - a Set the hour by tuning the **MULTI JOG** knob to the right or to the left.
  - b Press **ENTER/DISPLAY**.  
**Result:** The minutes flash.
  - c Set the minutes by tuning the **MULTI JOG** knob to the right or to the left.
  - d Press **ENTER/DISPLAY**.  
**Result:** **OFF TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.
- 5 Set the timer switch-off time.
  - a Set the hour by tuning the **MULTI JOG** knob to the right or to the left.
  - b Press **ENTER/DISPLAY**.  
**Result:** The minutes flash.
  - c Set the minutes by tuning the **Multi Jog** knob to the right or to the left.
  - d Press **ENTER/DISPLAY**.  
**Result:** **VOL XX** is displayed, where **XX** corresponds to the volume already set.
- 6 Press **◀▶ DOWN** and **UP** to adjust the volume level and press **ENTER/DISPLAY**.  
**Result:** The source to be selected is displayed.
- 7 Turn the **MULTI JOG** knob to select the source to be played when the system switches on.
 

If you select...	You must also...
TAPE (cassette) .....	Insert a recorded cassette in one of the decks before setting the system to standby.
TUNER (radio) .....	<ol style="list-style-type: none"> <li>a Press <b>ENTER/DISPLAY</b>.</li> <li>b Select a preset station by tuning the <b>MULTI JOG</b> knob to the right or to the left.</li> </ol>
VCD/CD (compact disc) .....	<ol style="list-style-type: none"> <li>a Load one or more compact discs.</li> <li>b Select the required disc.</li> </ol>
- 8 Press **ENTER/DISPLAY** to confirm the timer.
- 9 Press **ECO/STANDBY/ON** to set the system to standby mode.  
**Result:** ☹ is displayed to the bottom left of the time, indicating that the timer has been set. The system will switch on and off automatically at the required times.

➤ If the timer switch on and off times are identical, the word **ERROR** is displayed.

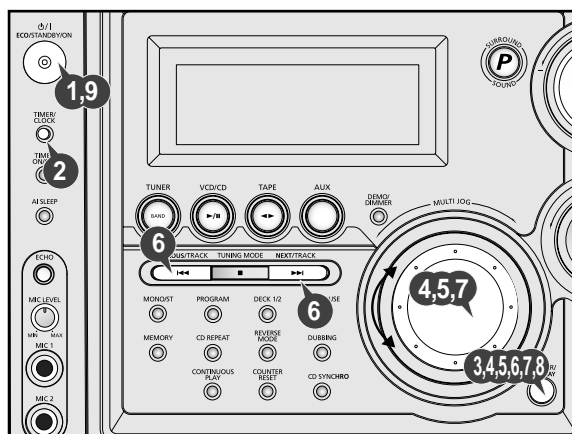

### To set the timer function


- ◆ You may use **MULTI JOG** or **◀▶** buttons to adjust in step **4,5,6,7**.

## Cancelling the Timer

After having set the timer, it will start automatically as shown by the **TIMER** indication on the display. If you no longer wish to use the timer, you must cancel it.

➤ You can stop the timer at any time (system on or in standby mode).


To...	Press <b>TIMER ON/OFF...</b>
Cancel the timer .....	Once. <b>Result:</b> ☹ is no longer displayed.
Restart the timer .....	Twice. <b>Result:</b> ☹ is displayed again.

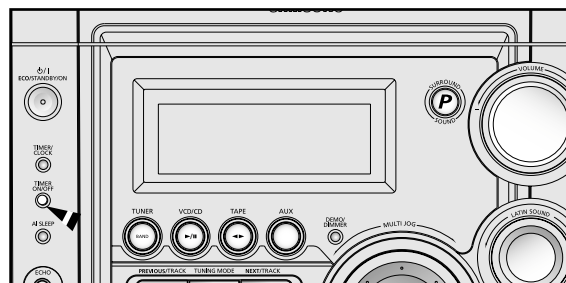

## Mute Function

You can turn the sound off temporarily on your system.  
**Example:** You wish to answer a telephone call.

- 1 Press **MUTE**.
- 2 To switch the sound back on (at the same volume as before), press **MUTE** again or the **VOLUME** buttons.

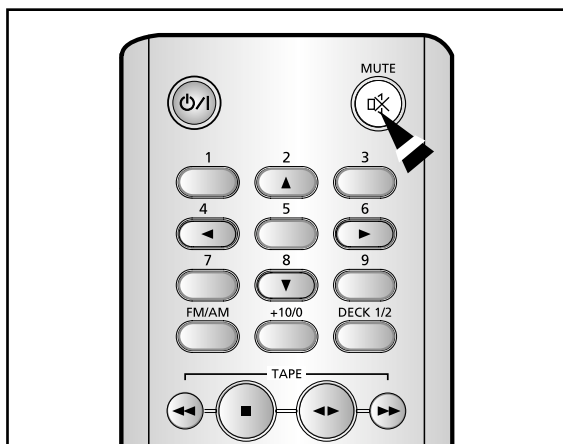

## Selecting Latin Sound


Your mini-compact system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

This model provides D.S.P modes so that you can enjoy virtually original sound.

- 1 Press **LATIN SOUND** on the front panel until the required option is selected.

To obtain a...	Select...
Normal balance (linear) .....	PASS
Balance suitable for pop music .....	POP
Balance suitable for rock music .....	ROCK
Balance suitable for classic music .....	CLASSIC
Balance suitable for hall .....	SALSA
Balance suitable for live .....	SAMBA
Balance suitable for cinema .....	LAMBADA


- 2 Press the **LOOP DANCE** button, the current DSP mode can be converted to **SALSA** mode and the blue (amber for MAX-VS940) LED can flash in certain mode. It makes the place living and shining.

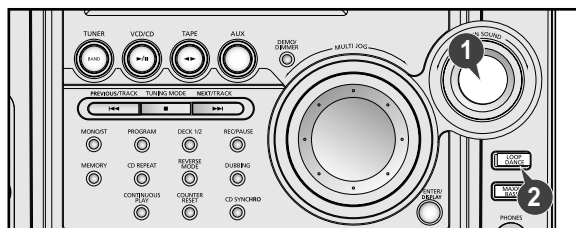

## Sub woofer Level Control (MAX-VS940/VS990)

You can control the sub woofer level with the SUB WOOFER OUT SYSTEM CONTROL Jack.

- 1 Press the **POWER ON/OFF** button to switch on the subwoofer .
- 2 Turn the **SUB WOOFER LEVEL** knob to adjust the sub woofer volume.

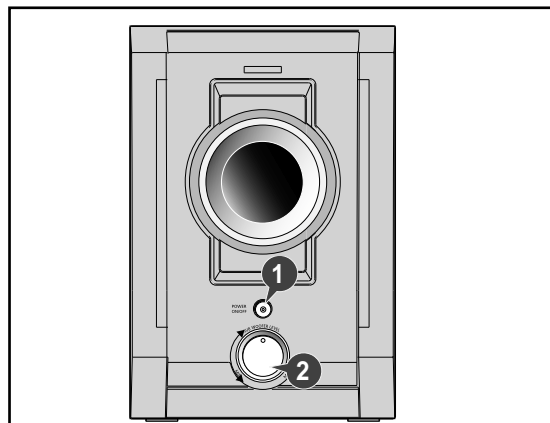


## Power Surround/Power Sound Function

Your mini-compact system is equipped with the function of Power Surround/Power Sound.

The Power Surround replaces conventional stereo sound with a wider and more true-to-life sound. It creates the feeling of being right at the centre of the music and being surrounded by total music sound.  
 The function of Power Sound amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.


- Press **P.SURROUND/P.SOUND** button on the front panel until the required option is selected. Each time the **P. SURROUND/ P.SOUND** button is pressed, **"P.SOUND,P.SURR "** is selected or cancelled in this order.

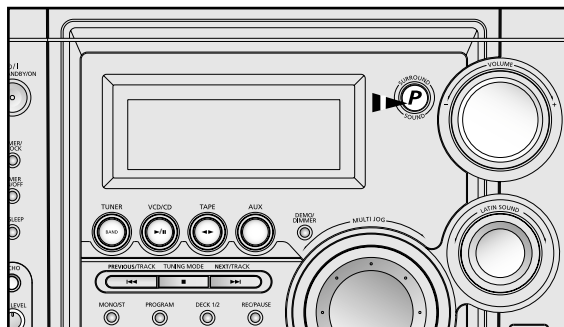


## Setting the System to Switch off Automatically

While listening to a compact disc or a cassette, you can set the system to switch off automatically.


**Example:** You wish to go to sleep to music.


- 1 Press **AI SLEEP**.  
**Result:** playback starts and the following indications are displayed:  
**90 MIN**
- 2 Press **AI SLEEP** one or more times to indicate how long the system should continue playing before it switches off:  

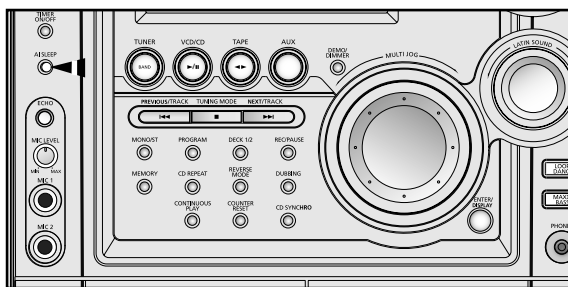  - At any time, you can:
    - ◆ Check the remaining time by pressing **AI SLEEP**
    - ◆ Change the remaining time by repeating Steps 1 and 2
- 3 Press **AI SLEEP** one or more times until **AI SLEEP** is displayed.  
**Result:** The system will automatically switch off at the end of the disc or cassette.
- 4 To cancel SLEEP function, press **AI SLEEP** one or more times until **OFF** is display.



## MAXX BASS Level Function (MAX-VS940/VS990)


MAXX BASS utilizes the principle of the missing fundamental ,which creates the sensation of low frequencies by generating a carefully calculated series of harmonics designed to simulate the auditory experience caused by the missing fundamental pitch. These harmonics extend the virtual frequency response up to two-third or 1<sup>1</sup>/<sub>2</sub> octaves below the physical speaker cutoff frequency without perceived distortion or increased power consumption. MAXX BASS function stresses low tones providing thudding sound effects.

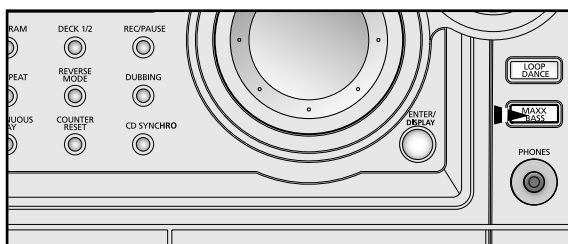
- 1 press **MAXX BASS** button on the front panel to select:  

- 2 You can select the level of low tones you desire.



## S.BASS Level Function (MAX-VS950)

Super BASS function stresses low tones providing thudding sound effects.

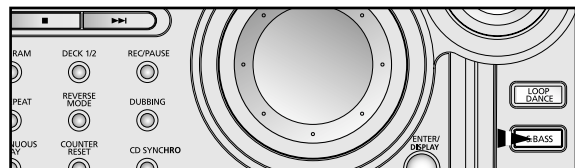- 1 press **S.BASS** button on the front panel to select:  

- 2 You can select the level of low tones you desire.



## Microphone Function


The microphone enables the user to mix in his or her vocals to sing-along with the music.

### Preparation

Plug the microphone with a 6.3ø mic jack into microphone terminal.

- 1 Turn the **MIC LEVEL** knob to adjust the **MIC1**, **MIC2** volume.
- 2 Press **ECHO** button to select ECHO1,ECHO2,ECHO OFF.

➤ The **POWER SURROUND** function is not available if plugging the Microphone into **MIC** jacks.

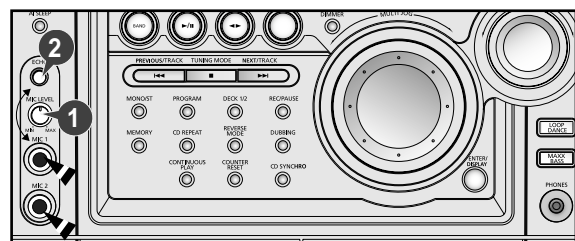


## Connecting Headphones

You can connect a set of headphones to your mini-compact system so that you can listen to music or radio programmers without disturbing other people in the room. The headphones must have a 3.5ø jack or an appropriate adapter.


Connect the headphones to the **PHONES** jack on the front panel.  
**Result:** The loudspeakers are no longer used to output the sound.

➤ Prolonged use of headphones at a high volume may damage your hearing.

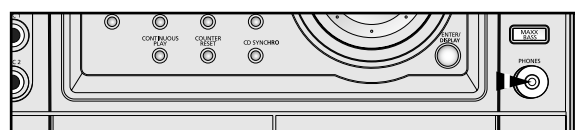


## Safety Precautions


The following diagrams illustrate the precautions to be taken when using or moving your mini-compact system.

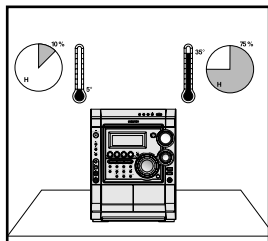


Ambient operating conditions:  
Ambient temperature 5°C-35°C  
Humidity 10-75%

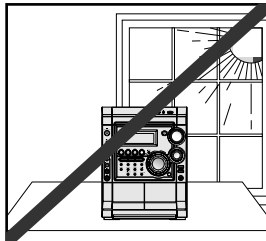


Do not expose the unit to direct sun radiation or other heat sources. This could lead to overheating and malfunction of the unit.

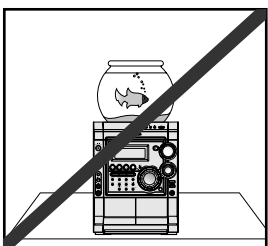


Do not place potted plants or vases on top of the unit. Moisture entering the unit could lead to dangerous electric shock and can cause equipment damage. In such events immediately disconnect the main plug from the socket.

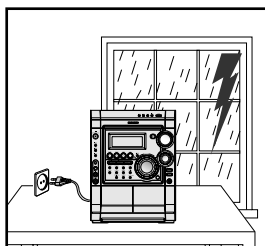


During thunderstorms, disconnect the main plug from the socket. Main voltage peaks due to lightning could damage the unit.

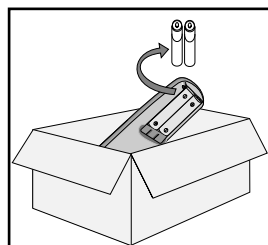


Remove the batteries from the remote control, if not used for any extended period. Leaking batteries can cause serious damage to the remote control.

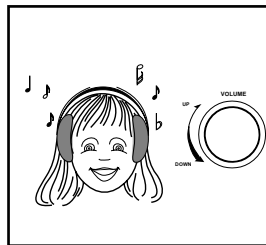

When using headphones, take care not to listen at excessive volumes. Extended use of headphones at high volumes will lead to hearing damage.

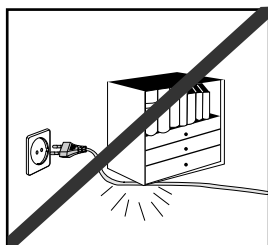

Do not place heavy items on the main lead. Main cable damage can lead to damage of the equipment (fire hazard) and can cause electric shock.

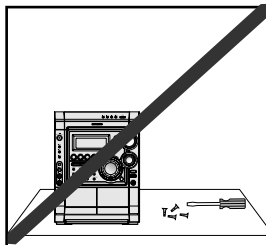

Do not remove any equipment panels. The inside of the unit contains live components, which cause electric shock.

## Cleaning Your Mini-Compact System

GB

To obtain the best possible results from your mini-compact system, you must clean the following elements regularly:

- ◆ The outer casing
- ◆ The compact disc player
- ◆ The cassette players (heads, rollers and drive capstans)
- ◆ Always unplug the system from the wall outlet:
  - ◆ Before cleaning it
  - ◆ If you are not going to be using it for a long time

### Outer Casing


Clean the outer casing regularly using a soft cloth and a light detergent. Do not use abrasive powders, liquids or aerosol cleaners. Never let any liquids get into the system.

### Compact Disc Player

- 1 Before playing a compact disc, clean it with a special CD cleaning agent. Do not use the same cleaning agents as for vinyl LP records. Carefully wipe the disc from the centre outward.
- 2 Regularly clean the player with a special cleaning disc (available from your local dealer).


### Tape Decks


- 1 Press **Push Eject** (▲) to open the cassette deck.
- 2 Use a cotton bud and a special cassette cleaning agent to clean the:
  - ◆ Head (1)
  - ◆ Rollers (2)
  - ◆ Drive capstans (3)

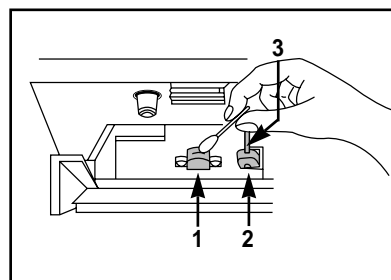

- ◆ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ◆ Although your system is very hard-wearing, it should not be used in an excessively dusty environment or subjected to shocks or extreme heat (close to heating appliances or in direct sunlight, etc.).
- ◆ If the unit emits an unpleasant odor when in use, unplug it from the main supply and contact the after-sales service.




## Precautions When Using Compact Discs

- ◆ Handle your compact discs with care. Always hold them by the edges to avoid leaving fingerprints on the shiny surface.
- ◆ When you have finished playing a compact disc, always put it back in its case.
- ◆ Do not fix paper or adhesive tape to the discs and do not write on the label.
- ◆ Clean them with a special-purpose cloth.
- ◆ Store your compact discs in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Always use compact discs marked .

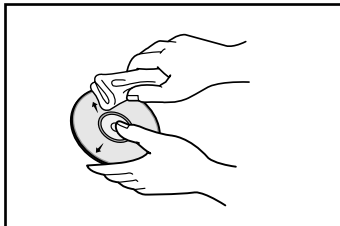

## Precautions When Using Audio Cassettes

- ◆ Check that the tape in the cassette is sufficiently taught.
- ◆ To prevent erasing a cassette that you wish to keep, remove the safety tab on the upper edge of the cassette. To record a cassette, where the tab has been broken, simply cover the opening with adhesive tape.
- ◆ When you have finished playing a cassette, always put it back in its case.
- ◆ Store your cassettes in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Avoid using 120-minute cassettes as they place unnecessary strain on the tape mechanism.

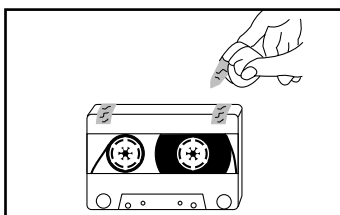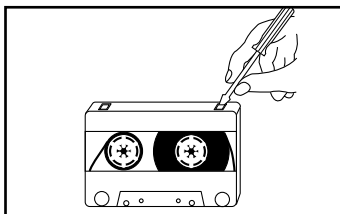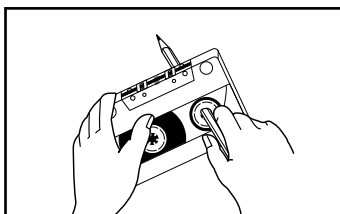

## Before Contacting the After-Sales Service

It always takes a little time to become familiar with a new appliance. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

Problem	Checks/Explanation
The system does not work	<ul style="list-style-type: none"> <li>• The main lead is not correctly plugged into a wall socket or the wall socket is not switched on.</li> <li>• The remote control batteries need replacing or the polarity has not been respected.</li> <li>• The <b>ECO/STANDBY/ON</b> button has not been pressed.</li> </ul>
There is no sound	<ul style="list-style-type: none"> <li>• The volume has been completely turned down.</li> <li>• The correct function (<b>TUNER</b>, <b>CD</b>, <b>TAPE</b>, <b>AUX</b>) has not been selected.</li> <li>• You have connected a set of earphones.</li> <li>• The loudspeaker wires have been disconnected.</li> <li>• The <b>MUTE</b> button has been pressed.</li> </ul>
The Timer does not work	<ul style="list-style-type: none"> <li>• The timer has been stopped by pressing <b>TIMER ON/OFF</b>.</li> </ul>
In case it does not work, even the action is taken as above.	<ul style="list-style-type: none"> <li>• Press the <b>P.SURROUND/P.SOUND</b> button for 5 seconds in power 'OFF'(standby), then it is returned the original position (<b>RESET</b>)</li> </ul>
The compact disc player does not start playing	<ul style="list-style-type: none"> <li>• The <b>CD</b> function has not been selected.</li> <li>• The disc has been inserted face down or is either dirty or scratched.</li> <li>• The laser sensor is dirty or dusty.</li> <li>• The system has not been installed on a flat, horizontal surface.</li> <li>• Condensation has formed in the player; leave the system in a warm, airy room for at least one hour.</li> </ul>
The MP-3 CD player cannot be played.	<ul style="list-style-type: none"> <li>• Use the <b>PC</b> to confirm if the extension is *.mp3.</li> </ul>
The tape does not start playing	<ul style="list-style-type: none"> <li>• The <b>TAPE</b> function has not been selected.</li> <li>• The cassette has not been inserted correctly.</li> <li>• The cassette player has not been closed.</li> <li>• The tape is either slack or broken.</li> </ul>
The volume falls off The cassette is not erased correctly There is excessive wow and flutter	<ul style="list-style-type: none"> <li>• The audio heads are dirty.</li> <li>• The rollers or drive capstans are dirty.</li> <li>• The tape is worn.</li> </ul>
Reception is poor or no radio stations are received at all	<ul style="list-style-type: none"> <li>• The <b>TUNER</b> function has not been selected.</li> <li>• The radio frequency has not been correctly selected.</li> <li>• The aerial has been disconnected or is not facing the right way. Turn it until you find the best orientation.</li> <li>• You are in a building that blocks radio waves; you must use an outside aerial.</li> </ul>

If the above guidelines do not allow you to solve the problem, take a note of:

- ◆ The model and serial numbers, normally printed on the rear of the system
  - ◆ Your warranty details
  - ◆ A clear description of the problem
- Then contact your local dealer or SAMSUNG after-sales service.

## Technical Specifications



SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

<b>RADIO</b>	
<b>SW(option)</b>	
Usable sensitivity	40 dB
<b>LW(option)</b>	
Usable sensitivity	60 dB
<b>AM (MW)</b>	
Signal/noise ratio	40 dB
Usable sensitivity	54 dB
Total harmonic distortion	2 %
<b>FM</b>	
Signal/noise ratio	55 dB
Usable sensitivity	10 dB
Total harmonic distortion	0.6 %
.....	
<b>COMPACT DISC PLAYER</b>	
Capacity	3 discs
Frequency range	20 Hz - 20 KHz (± 1 dB)
Signal/noise ratio	85 dB (at 1 KHz) with filter
Distortion	0.05 % (at 1 KHz)
Channel separation	74 dB
Disc sizes	Diameter: 120 or 80 mm. Thickness: 1.2 mm
.....	
<b>TAPE DECK</b>	
Frequency range	125 Hz ~ 10 KHz
Signal/noise ratio	40 dB
Channel separation	30 dB
Erasing effect	50 dB
.....	
<b>AMPLIFIER</b>	
Output power	
Front(6 Ω)	250 Watts/CH RMS,IEC (total harmonic distortion: 10 %)(MAX-VS950/VS990)
	100 Watts/CH RMS,IEC (total harmonic distortion: 10 %)(MAX-VS940)
Surround (6 Ω)	250 Watts/CH RMS,IEC (total harmonic distortion: 10 %)(MAX-VS950/VS990)
Sub woofer(8 Ω)	200 Watts RMS,IEC (total harmonic distortion: 10 %)(MAX-VS940/VS990)
Channel separation	40 dB
Signal/noise ratio	75 dB
.....	
<b>GENERAL</b>	
Dimensions	280 (W) x 370 (H) x 455 (D) mm

THIS APPLIANCE IS MANUFACTURED BY:



AH68-01386A